



NLS-HR3260 Series

Corded 2D Barcode Scanner

User Guide

Disclaimer

© 2013-2016 Fujian Newland Auto-ID Tech. Co., Ltd. All rights reserved.

Please read through the manual carefully before using the product and operate it according to the manual. It is advised that you should keep this manual for future reference.

Do not disassemble the device or remove the seal label from the device, doing so will void the product warranty provided by Fujian Newland Auto-ID Tech. Co., Ltd.

All pictures in this manual are for reference only and actual product may differ. Regarding to the product modification and update, Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make changes to any software or hardware to improve reliability, function, or design at any time without notice. The information contained herein is subject to change without prior notice.

The products depicted in this manual may include software copyrighted by Fujian Newland Auto-ID Tech. Co., Ltd or third party. The user, corporation or individual, shall not duplicate, in whole or in part, distribute, modify, decompile, disassemble, decode, reverse engineer, rent, transfer or sublicense such software without prior written consent from the copyright holders.

This manual is copyrighted. No part of this publication may be reproduced, distributed or used in any form without written permission from Newland.

Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make final interpretation of the statement above.

Fujian Newland Auto-ID Tech. Co., Ltd.

3F, Building A, No.1, Rujiang West Rd., Mawei, Fuzhou, Fujian, China 350015

<http://www.nlscan.com>

Revision History

Version	Description	Date
V1.0.0	Initial release.	June 8, 2013
V1.1.0	<p>Changed the default settings of the following parameters to:</p> <p>UPC-E System Character “0” Transmit</p> <p>Code 39 Start/Stop Character Do not transmit</p> <p>Codabar Start/Stop Character Do not transmit</p>	March 7, 2016
V1.2.0	<p>Updates:</p> <ol style="list-style-type: none"> 1. Added the Timeout between Decodes (Same Barcode) for the Manual mode and Continuous mode, Custom Defaults and Inquire Product Information features in Chapter 2. 2. Added 8 USB country keyboard types: Spain, Turkey_Q, UK, Austria/Germany, Belgium, Russia, Sweden, Portugal. 3. Added the Polling Rate, Custom Inter-Keystroke Delay, Emulate ALT+Keypad, Function Key Mapping, Emulate Numeric Keypad, Code Page and USB HID-POS features in Chapter 4. 4. Added the Character Encoding feature for PDF417, QR Code and Data Matrix in Chapter 5. 5. Added the Image Flipping feature in Chapter 7. 6. Added Chapter 8: Scanning Preferences. 	May 5, 2016

Table of Contents

Revision History	- 4 -
Preface.....	1
Introduction	1
Chapter Description	1
Explanation of Icons	2
Chapter 1 Getting Started.....	3
Introduction	3
Features of the HR32	3
Unpacking	3
HR32 Corded Scanner	4
Connecting HR32 to a Host.....	5
Using USB Cable.....	6
Using RS-232 Cable.....	7
Removing Communication Cable	8
Power On, Sleep, Power Off, Reboot.....	8
Maintenance	9
Dimensions	10
Left View	10
Front View.....	10
Top View	10
Scanning Instructions	12
Chapter 2 System Settings.....	13
Introduction	13
Barcode Programming.....	13
Command Programming	13
Programming Barcode/Command/Function	14
Use of Programming Barcodes	14
Illumination.....	16
Aiming	17
Beep.....	18
Good Read Beep (Non-Programming Barcode)	18

Good Read Beep Type	18
Good Read Beep Volume	19
Good Read Beep (Programming Barcode)	19
Startup Beep	19
Good Read LED Notification.....	19
Transmit NGR Message	21
Edit NGR Message	21
Scan Mode.....	21
Manual Mode	21
Decode Session Timeout	22
Auto Sleep	23
Timeout between Decodes (Same Barcode)	24
Sense Mode.....	24
Decode Session Timeout	25
Image Stabilization Timeout	26
Continue after Good Read	26
Timeout between Decodes (Same Barcode)	27
Sensitivity	28
Continuous Mode	29
Decode Session Timeout	29
Timeout between Decodes.....	30
Timeout between Decodes (Same Barcode)	31
Factory Defaults.....	32
Custom Defaults	32
Inquire Product Information	32
Chapter 3 RS-232 Interface	33
Introduction	33
RS-232 Parameters	33
Baud Rate	34
Parity Check	35
Data Bit	35
Data Bit & Parity Check	35
Stop Bit	36
Hardware Auto Flow Control	37
Chapter 4 USB Interface	38

Introduction	38
USB Enumeration	38
USB HID-KBW	39
Polling Rate	40
USB Country Keyboard Types	41
Beep on Unknown Character	44
Inter-Keystroke Delay	45
Convert Case	46
Emulate ALT+Keypad	47
Function Key Mapping	48
Emulate Numeric Keypad	48
Code Page	48
USB COM Port Emulation	50
USB HID-POS	50
Introduction	50
Access the Scanner with Your Program	50
Acquire Scanned Data	51
Send Data to the Scanner	51
VID/PID	51
Chapter 5 Symbologies	52
Introduction	52
General Settings	52
Disable All Symbologies	52
Enable All Symbologies	52
Enable 1D Symbologies	53
Disable 1D Symbologies	53
Enable 2D Symbologies	53
Disable 2D Symbologies	53
Video Reverse	54
Code 128	55
Restore Factory Defaults	55
Enable/Disable Code 128	55
Set Length Range for Code 128	56
EAN-8	57
Restore Factory Defaults	57

Enable/Disable EAN-8	57
Transmit Check Digit	57
Add-On Code	58
Add-On Code Required	59
EAN-8 Extension	59
EAN-13	60
Restore Factory Defaults	60
Enable/Disable EAN-13	60
Transmit Check Digit	60
Add-On Code	61
Add-On Code Required	61
UPC-E	63
Restore Factory Defaults	63
Enable/Disable UPC-E	63
Transmit Check Digit	63
Add-On Code	64
Add-On Code Required	64
Transmit System Character "0"	65
UPC-E Extension	66
UPC-A	67
Restore Factory Defaults	67
Enable/Disable UPC-A	67
Transmit Check Digit	67
Add-On Code	68
Add-On Code Required	68
Transmit Preamble Character "0"	69
Interleaved 2 of 5	70
Restore Factory Defaults	70
Enable/Disable Interleaved 2 of 5	70
Set Length Range for Interleaved 2 of 5	71
Check Digit Verification	72
ITF-14	73
ITF-6	74
Matrix 2 of 5	75
Restore Factory Defaults	75
Enable/Disable Matrix 2 of 5	75

Set Length Range for Matrix 2 of 5	76
Check Digit Verification.....	77
Code 39.....	78
Restore Factory Defaults.....	78
Enable/Disable Code 39.....	78
Transmit Start/Stop Character	78
Set Length Range for Code 39.....	79
Check Digit Verification.....	80
Enable/Disable Code 39 Full ASCII	81
Codabar	82
Restore Factory Defaults.....	82
Enable/Disable Codabar.....	82
Set Length Range for Codabar	83
Check Digit Verification.....	84
Start/Stop Character	85
Code 93.....	86
Restore Factory Defaults.....	86
Enable/Disable Code 93.....	86
Set Length Range for Code 93.....	87
Check Digit Verification.....	88
UCC/EAN-128.....	89
Restore Factory Defaults.....	89
Enable/Disable UCC/EAN-128.....	89
Set Length Range for UCC/EAN-128.....	90
GS1 Databar	91
Restore Factory Defaults.....	91
Enable/Disable GS1 Databar	91
Transmit Application Identifier "01"	91
Code 11.....	92
Restore Factory Defaults.....	92
Enable/Disable Code 11	92
Set Length Range for Code 11	93
Check Digit Verification.....	94
ISBN.....	94
Restore Factory Defaults.....	94
Enable/Disable ISBN.....	95

Set ISBN Format.....	95
Add-On Code.....	96
Add-On Code Required.....	97
ISSN.....	98
Restore Factory Defaults.....	98
Enable/Disable ISSN.....	98
Add-On Code.....	99
Add-On Code Required.....	100
AIM-128.....	101
Restore Factory Defaults.....	101
Enable/Disable AIM-128.....	101
Set Length Range for AIM-128.....	102
Industrial 25.....	103
Restore Factory Defaults.....	103
Enable/Disable Industrial 25.....	103
Set Length Range for Industrial 25.....	104
Check Digit Verification.....	105
Standard 25.....	106
Restore Factory Defaults.....	106
Enable/Disable Standard 25.....	106
Set Length Range for Standard 25.....	107
Check Digit Verification.....	108
Plessey.....	109
Restore Factory Defaults.....	109
Enable/Disable Plessey.....	109
Set Length Range for Plessey.....	110
Check Digit Verification.....	111
MSI-Plessey.....	112
Restore Factory Defaults.....	112
Enable/Disable MSI-Plessey.....	112
Set Length Range for MSI-Plessey.....	113
Check Digit Verification.....	114
PDF417.....	115
Restore Factory Defaults.....	115
Enable/Disable PDF417.....	115
Set Length Range for PDF417.....	116

PDF 417 Twin Code.....	117
Character Encoding.....	118
QR Code	119
Restore Factory Defaults.....	119
Enable/Disable QR Code	119
Set Length Range for QR Code	120
Micro QR.....	121
QR Twin Code	122
Character Encoding.....	123
Data Matrix.....	124
Restore Factory Defaults.....	124
Enable/Disable Data Matrix	124
Set Length Range for Data Matrix.....	125
Rectangular Barcode.....	126
Mirror Image	126
Data Matrix Twin Code	127
Character Encoding.....	127
Chapter 6 Prefix & Suffix	128
Introduction	128
General Settings	129
Enable/Disable All Prefix/Suffix	129
Prefix Sequences	129
Custom Prefix	130
Enable/Disable Custom Prefix.....	130
Set Custom Prefix.....	130
AIM ID Prefix.....	131
Code ID Prefix.....	131
Restore All Default Code IDs.....	132
Modify Code ID	132
Custom Suffix.....	135
Enable/Disable Custom Suffix.....	135
Set Custom Suffix.....	136
Terminating Character Suffix	136
Enable/Disable Terminating Character Suffix.....	136
Set Terminating Character Suffix.....	136

Chapter 7 Image Control	139
Image Flipping	139
Flip	140
Flip Vertically	140
Flip Horizontally	140
Chapter 8 Scanning Preferences.....	141
Introduction	141
Decode Area	141
Whole Area Decoding.....	141
Central Area Decoding	141
Specify Central Area.....	142
Appendix	143
Digit Barcodes.....	143
Save/Cancel Barcodes	146
Factory Defaults Table	147
AIM ID Table.....	155
Code ID Table	158
ASCII Table	159
ASCII Function Key Mapping Table.....	163
Code Pages List.....	165

Preface

Introduction

This manual provides detailed instructions for setting up and using the NLS-HR3260 Series corded 2D barcode scanner (hereinafter referred to as “**HR32 corded scanner**” or “**the scanner**”).

Chapter Description

- | | |
|--|--|
| ✧ <i>Chapter 1, Getting Started</i> | : Gives a general description of HR32 corded scanner. |
| ✧ <i>Chapter 2, System Settings</i> | : Introduces three configuration methods and describes how to configure general parameters of HR32 corded scanner. |
| ✧ <i>Chapter 3, RS-232 Interface</i> | : Describes how to configure RS-232 communication parameters. |
| ✧ <i>Chapter 4, USB Interface</i> | : Describes how to configure USB communication parameters. |
| ✧ <i>Chapter 5, Symbolologies</i> | : Lists all compatible symbolologies and describes how to configure the relevant parameters.. |
| ✧ <i>Chapter 6, Prefix & Suffix</i> | : Describes how to use prefix and suffix to customize scanned data. |
| ✧ <i>Chapter 7, Image Control</i> | : Describes how to configure the scanner to flip image. |
| ✧ <i>Chapter 8, Scanning Preferences</i> | : Describes how to adapt your scanner to various applications with preference setting.. |
| ✧ <i>Appendix</i> | : Provides factory defaults table and a bunch of frequently used programming barcodes. |

Explanation of Icons



This icon indicates something relevant to this manual.



This icon indicates this information requires extra attention from the reader.



This icon indicates handy tips that can help you use or configure the scanner with ease.



This icon indicates practical examples that can help you to acquaint yourself with operations.

Chapter 1 Getting Started

Introduction

The HR32 corded scanner reads a 1D or 2D barcode by capturing its image. Adopting the advanced **UIMG** technology independently developed by Newland Auto-ID Tech, it provides users with three scan modes, including Manual Mode, Sense Mode and Continuous Mode, tailored to different scanning needs.

An illustrated introduction to the HR32 corded scanner is included in this chapter. If you have an HR32 corded scanner at hand, make good use of it to develop a better understanding of this manual. This chapter is written for normal users, maintenance staff and software developers.

Features of the HR32

- Comprehensive data capture: most 1D and 2D barcodes.
- Fast and accurate decoding capability: integrates high-performance processor and barcode decoder board.
- Easy to configure and update.

Unpacking

Open the package and take out HR32 corded scanner and its accessories. Check to make sure everything on the packing list is present and intact. If any contents are damaged or missing, please keep the original package and contact your dealer immediately for after-sale service.

HR32 Corded Scanner

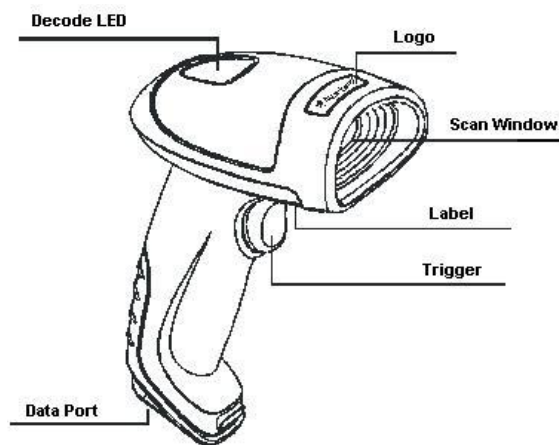


Fig. 1-1

Decode LED Definitions

Red : Scanner is powered on.

Green: Barcode is decoded successfully.

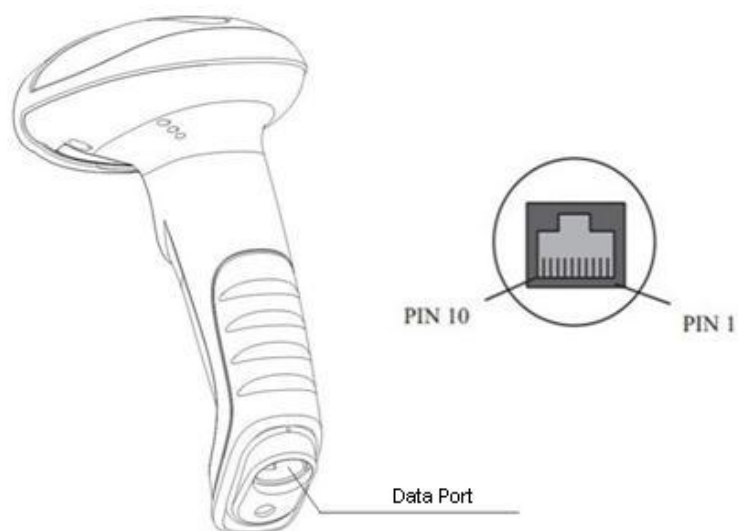


Fig. 1-2

Data port pinout:


PIN	Signal	Type	Function
1	NC	-	No connection
2	NC	-	No connection
3	VCC	P	Power+ (+5V)
4	TXD	O	RS-232 output
5	RXD	I	RS-232 input
6	nCTS	I	Flow control signal
7	nRTS	O	
8	GND	P	Ground
9	D-	I/O	USB signal
10	D+	I/O	

Connecting HR32 to a Host

The HR32 corded scanner must be connected to a Host in actual application, such as PC, POS or any intelligent terminal with USB or RS-232 port, via a communication cable, either USB or RS-232 cable.

USB

 USB port on the Host



RS-232

RS-232 port on the Host



Using USB Cable

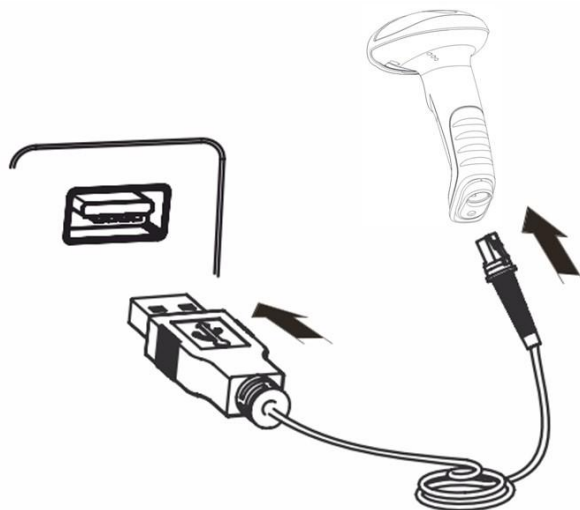


Fig. 1-3

Connect the HR32 corded scanner to a Host through a USB cable with RJ45 and USB connectors:

1. Plug the RJ45 connector into the data port (see Fig.1-1) on the scanner.
2. Plug the USB connector into the USB port on the Host.

Using RS-232 Cable

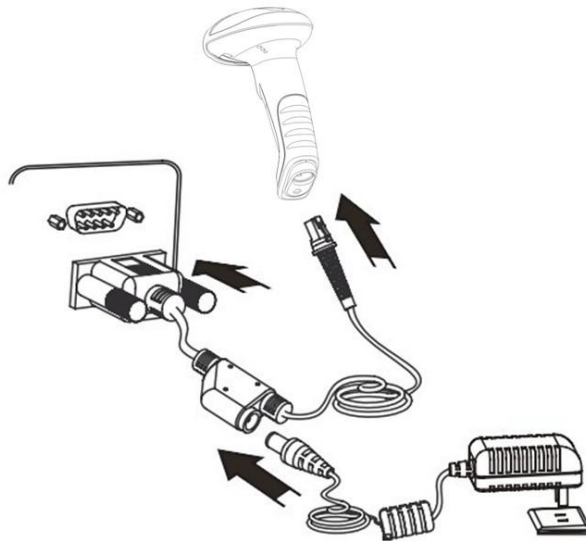


Fig. 1-4

Connect the HR32 corded scanner to a Host through an RS-232 cable with RJ45, RS-232 and power connectors:

1. Plug the RJ45 connector into the data port (see Fig.1-1) on the scanner.
2. Plug the RS-232 connector into the RS-232 port on the Host.
3. Connect the supplied power adaptor to the power connector of the RS-232 cable.

Removing Communication Cable

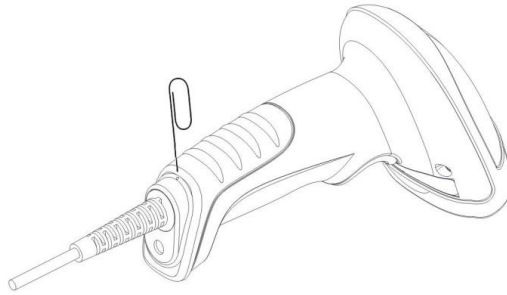


Fig. 1-5

Get an appropriate needle or a straightened paper clip (Fig. 1-5) and then follow the steps below:

1. Disconnect the power adaptor from mains if there is one.
2. Insert the needle into the hole.
3. Pull out the cable slowly from the scanner while pressing the needle in.
4. Remove the needle.
5. Disconnect the cable from the Host.

Power On, Sleep, Power Off, Reboot

Power on the scanner

Connect the scanner to a Host. Then the scanner will be turned on and automatically enter the sleep mode.

Enter the sleep mode

If no operation is performed on the device for some time, the device will automatically enter the sleep state. (Applicable to the Manual mode only)

Power off the scanner

Remove the communication cable from the scanner; or remove the USB cable from the Host; or disconnect the power adaptor from mains.

Reboot the scanner

If the scanner stops responding to input or runs abnormally, turn off the scanner and then turn it back on.

Maintenance

- ✧ The scan window should be kept clean.
- ✧ Do not scratch the scan window.
- ✧ Use soft brush to remove the stain from the scan window.
- ✧ Use the soft cloth to clean the window, such as eyeglass cleaning cloth.
- ✧ Do not spray any liquid on the scan window.
- ✧ Only use water to clean other parts of the device.



The warranty **DOES NOT** cover damages caused by inappropriate care and maintenance.

Dimensions

Left View



Fig. 1-6

Front View

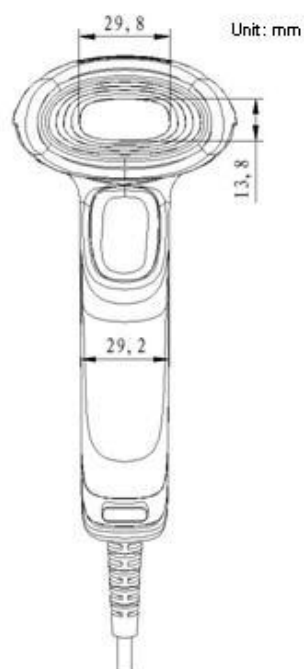


Fig. 1-7

Top View

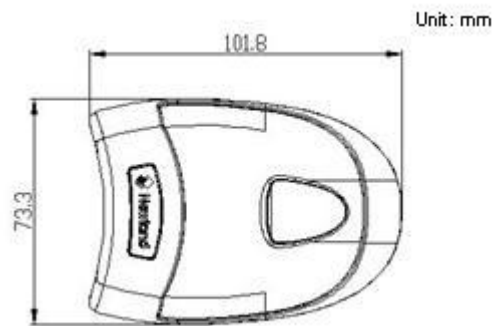


Fig. 1-8

Scanning Instructions

When the scanner is in the Manual scan mode, you can follow the steps below to scan a barcode:

- ✧ Press and hold the trigger (see Fig.1-1). Then the scanner will project a red aiming beam.
- ✧ Aim the red beam across the center of barcode, as shown in Fig.1-9.
- ✧ Release the trigger when the red beam goes off. If the barcode is decoded successfully, the scanner will beep and the decoded data will be sent to the Host.

Note: For the same batch of barcodes, the scanner will keep a very high success ratio in certain distance which can be regarded as the optimal scanning distance.

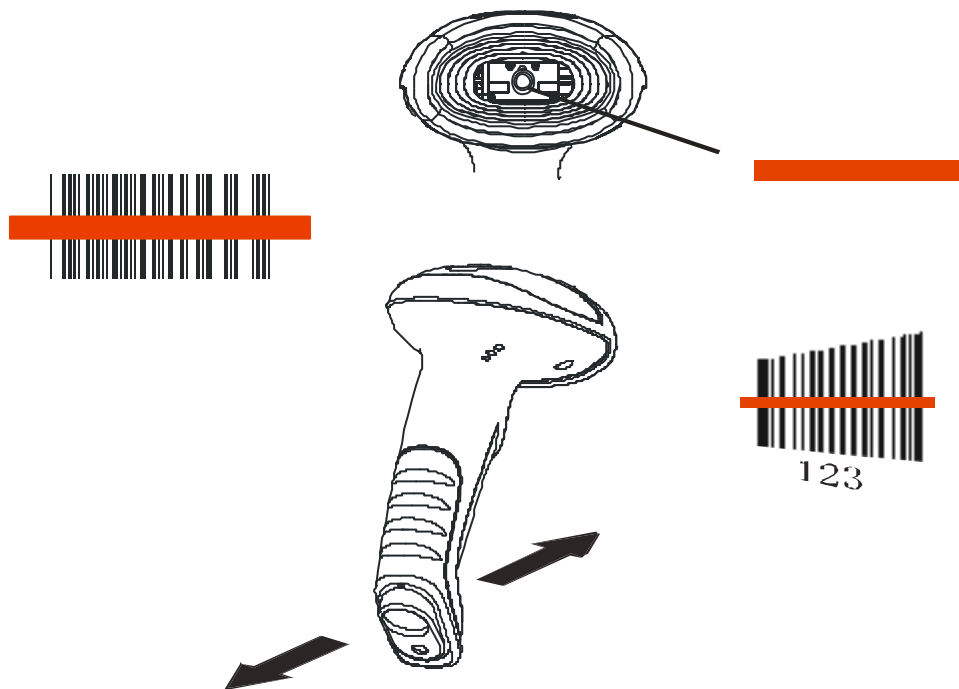


Fig. 1-9



0006010

【Enter Setup】

Chapter 2 System Settings

Introduction

There are two ways to configure the scanner: barcode programming and command programming.

Barcode Programming

The scanner can be configured through scanning programming barcodes. In the following sections, we will explain the available options and features and provide the barcodes to program them.

This programming method is most straightforward. However, it requires manually scanning barcodes. As a result, errors are more likely to occur.

Command Programming

The scanner can also be configured by command strings sent from the Host. In the following sections, the commands will be provided along with programming barcodes.

Users can also design an application to send those command strings to their scanners.

Note: All settings except temporary ones are stored in non-volatile memory of the scanner and will not be lost by removing power from the scanner.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Programming Barcode/Command/Function



The figure above is an example that shows you the programming barcode and command for the **Exit Setup** function:

1. The **Exit Setup** barcode
2. The **Exit Setup** command
3. The function/feature that can be enabled by using the programming barcode or command listed above.
4. ** indicates factory default setting.

Use of Programming Barcodes

Scanning the **Enter Setup** barcode can enable the scanner to enter the setup mode. Then you can scan a number of programming barcodes to configure your scanner. To exit the setup mode, scan the **Exit Setup** barcode.

If the scanner has exited the setup mode, only some special programming barcodes, such as the **Enter Setup** barcode and **Restore All Factory Defaults** barcode, can be read.



0006000

** 【Exit Setup】



0006010

【Enter Setup】



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Programming barcode data (i.e. the characters under programming barcode) can be transmitted to the Host. Scan the appropriate barcode below to enable or disable the transmission of programming barcode data to the Host.



0002000

**** 【Do Not Transmit Programming Barcode Data】**



0002010

【Transmit Programming Barcode Data】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Illumination

A couple of illumination options are provided to improve the lighting conditions during every image capture:

- ✧ **Normal:** Illumination LEDs are turned on only when scanner is reading barcode.
- ✧ **Always ON:** Illumination LEDs keep ON after scanner is powered on.
- ✧ **OFF:** Illumination LEDs are OFF all the time.



0200000

** 【Normal】



0200010

【Always ON】



0200020

【OFF】



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Aiming

When scanning/capturing image, the scanner projects an aiming pattern which allows positioning the target barcode within its field of view and thus makes decoding easier.

- ✧ **Normal:** The scanner projects an aiming pattern only during barcode scanning/capture.
- ✧ **Always ON:** Aiming pattern is constantly ON after the scanner is powered on.
- ✧ **OFF:** Aiming pattern is OFF all the time.



0201000

** 【Normal】



0201020

【OFF】



0201010

【Always ON】



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Beep

Good Read Beep (Non-Programming Barcode)

Scan the appropriate barcode below to enable or disable the emission of beep when a non-programming barcode is decoded.



0203010

**** 【Good Read Beep On, Non-Programming Barcode】**



0203000

【Good Read Beep Off, Non-Programming Barcode】

Good Read Beep Type



0203020

【Type 1】



0203022

**** 【Type 3】**



0203021

【Type 2】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Good Read Beep Volume



0203030

**** 【Loud】**



0203032

【Low】



0203031

【Medium】

Good Read Beep (Programming Barcode)

Scan the appropriate barcode below to enable or disable the emission of beep when a programming barcode is decoded.



0203041

**** 【Good Read Beep On, Programming Barcode】**



0203040

【Good Read Beep Off, Programming Barcode】

Startup Beep



0204001

**** 【Startup Beep On】**



0204000

【Startup Beep Off】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Good Read LED Notification



0206011

**** 【Good Read LED Notification On】**



0206010

【Good Read LED Notification Off】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Transmit NGR Message

Scan a barcode below to select whether or not to transmit a user-defined NGR (Not Good Read) message when a barcode is not decoded.



0320010

【Transmit NGR Message】



0320000

** 【Do Not Transmit NGR Message】

Edit NGR Message

To edit an NGR message, scan the **Edit NGR Message** barcode and the numeric barcodes corresponding to the ASCII values (decimal) of desired characters and then scan the **Save** barcode.

An NGR message can contain 0-7 characters (ASCII value of character: 0-255).



0320020

【Edit NGR Message】

E
xample

Set the NGR message to “!ERR” (0x21, 0x45, 0x52, 0x52):

1. Scan the **Enter Setup** barcode.
2. Scan the **Edit NGR Message** barcode.
3. Scan the numeric barcodes “2”, “1”, “4”, “5”, “5”, “2”, “5” and “2”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Scan Mode

Manual Mode

A trigger pull activates a decode session. The decode session continues until the barcode is decoded or you release the trigger or decode session timeout expires.



0302000

** 【Manual Mode】

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1ms increments from 0ms to 3,600,000ms. The default setting is 3,000ms.



0313000

【Decode Session Timeout】

E
xample

Set the Decode Session Timeout to 1,500ms:

1. Scan the **Enter Setup** barcode.
2. Scan the **Decode Session Timeout** barcode.
3. Scan the numeric barcodes “1”, “5”, “0” and “0”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Auto Sleep

Auto Sleep allows the scanner in the Manual Mode to automatically enter the sleep or low power mode if no operation or communication is performed for a time period (user programmable). When the scanner is in the sleep mode, receiving trigger signal or communication from the Host can awake the scanner. The scanner returns to full operation within 100ms.



0313060

** 【Enable Auto Sleep】



0313070

【Disable Auto Sleep】

The parameter below specifies the amount of time the scanner remains idle (no operation or communication expires) before it is put into sleep mode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 500ms.



0313050

【Time Period from Idle to Sleep】

E

sample

Set the time period from idle to sleep to 1,500ms:

1. Scan the **Enter Setup** barcode.
2. Scan the **Time Period from Idle to Sleep** barcode.
3. Scan the numeric barcodes “1”, “5”, “0” and “0”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】**Timeout between Decodes (Same Barcode)**

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

To enable/disable the Timeout between Decodes (Same Barcode), scan the appropriate barcode below.

Enable Timeout between Decodes: Do not allow the scanner to re-read same barcode before the timeout between decodes (same barcode) expires.

Disable Timeout between Decodes: Allow the scanner to re-read same barcode.



0313161

**** 【Disable Timeout between Decodes】**

0313171

【Enable Timeout between Decodes】

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.



0313010

【Timeout between Decodes (Same Barcode)】**E**
*xample***Set the Timeout between Decodes (Same Barcode) to 2,500ms:**

1. Scan the **Enter Setup** barcode.
2. Scan the **Timeout between Decodes (Same Barcode)** barcode.
3. Scan the numeric barcodes “2”, “5”, “0” and “0”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Exit Setup** barcode.



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Sense Mode

The scanner waits for the image stabilization timeout to expire before activating a decode session every time it detects a change in ambient illumination. Decode session continues until the barcode is decoded or the decode session timeout expires.

In the Sense mode, a trigger pull can also activate a decode session. The decode session continues until the barcode is decoded or the trigger is released. When the session ends, the scanner continues to monitor ambient illumination.



0302010

【Sense Mode】

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1ms increments from 0ms to 3,600,000ms. The default setting is 3,000ms.



0313000

【Decode Session Timeout】

E
xample

Set the Decode Session Timeout to 1,500ms:

1. Scan the **Enter Setup** barcode.
2. Scan the **Decode Session Timeout** barcode.
3. Scan the numeric barcodes “1”, “5”, “0” and “0”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Image Stabilization Timeout

The scanner waits for the image stabilization timeout to expire before activating a decode session every time it detects a change in ambient illumination. The image stabilization timeout is programmable in 1ms increments from 0ms to 1,600ms. The default setting is 500ms.



0313120

【Image Stabilization Timeout】**E**
xample

Set the Image Stabilization Timeout to 1,500ms:

1. Scan the **Enter Setup** barcode.
2. Scan the **Image Stabilization Timeout** barcode.
3. Scan the numeric barcodes “1”, “5”, “0” and “0”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Exit Setup** barcode.

Continue after Good Read

Continue after Good Read: The scanner starts next decode session after good read.

Pause after Good Read: The scanner starts another round of illumination monitoring and image stabilization after good read.



0313130

**** 【Pause after Good Read】**

0313131

【Continue after Good Read】

0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Timeout between Decodes (Same Barcode)

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

To enable/disable the Timeout between Decodes (Same Barcode), scan the appropriate barcode below.

Enable Timeout between Decodes: Do not allow the scanner to re-read same barcode before the timeout between decodes (same barcode) expires.

Disable Timeout between Decodes: Allow the scanner to re-read same barcode.



0313020

【Disable Timeout between Decodes】



0313030

** 【Enable Timeout between Decodes】

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.



0313010

【Timeout between Decodes (Same Barcode)】

E
xample

Set the Timeout between Decodes (Same Barcode) to 2,500ms:

1. Scan the **Enter Setup** barcode.
2. Scan the **Timeout between Decodes (Same Barcode)** barcode.
3. Scan the numeric barcodes “2”, “5”, “0” and “0”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Sensitivity

Sensitivity specifies the degree of acuteness of the scanner's response to changes in ambient illumination. The higher the sensitivity, the lower requirement in illumination change to trigger the scanner. You can select an appropriate degree of sensitivity that fits the ambient environment.



0312010

【Medium Sensitivity】



0312000

【Low Sensitivity】



0312020

【High Sensitivity】



0312030

【Enhanced Sensitivity】

If the above four options fail to meet your needs, you may program the threshold value of illumination change.

Illumination changes that reaches or surpasses the predefined threshold value will cause the scanner to start a decode session. The lower the threshold value, the greater the sensitivity of the scanner. The default threshold value is 2.



0312040

【Threshold Value of Illumination Change (1~20)】

E
xample

Set the threshold value of illumination change to 4:

1. Scan the **Enter Setup** barcode.
2. Scan the **Threshold Value of Illumination Change** barcode.
3. Scan the numeric barcode "4". (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Exit Setup** barcode.



0006000

**【Exit Setup】



0006010

【Enter Setup】

Continuous Mode

If the Continuous mode is enabled, the scanner automatically starts one decode session after another. To suspend/resume barcode reading, simply press the trigger.



0302020

【Continuous Mode】

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1ms increments from 0ms to 3,600,000ms. The default setting is 3,000ms.



0313000

【Decode Session Timeout】

E
xample

Set the Decode Session Timeout to 1,500ms:

1. Scan the **Enter Setup** barcode.
2. Scan the **Decode Session Timeout** barcode.
3. Scan the numeric barcodes “1”, “5”, “0” and “0”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Timeout between Decodes

This parameter sets the timeout between decode sessions. When a decode session ends, next session will not happen until the timeout between decodes expires. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,000ms.



0313040

【Timeout between Decodes】

E
xample

Set the Timeout between Decodes to 1,500ms:

1. Scan the **Enter Setup** barcode.
2. Scan the **Timeout between Decodes** barcode.
3. Scan the numeric barcodes “1”, “5”, “0” and “0”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Timeout between Decodes (Same Barcode)

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

To enable/disable the Timeout between Decodes (Same Barcode), scan the appropriate barcode below.

Enable Timeout between Decodes: Do not allow the scanner to re-read same barcode before the timeout between decodes (same barcode) expires.

Disable Timeout between Decodes: Allow the scanner to re-read same barcode.



0313160

** 【Disable Timeout between Decodes】



0313170

【Enable Timeout between Decodes】

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.



0313010

【Timeout between Decodes (Same Barcode)】

E

xample

Set the Timeout between Decodes (Same Barcode) to 2,500ms:

1. Scan the **Enter Setup** barcode.
2. Scan the **Timeout between Decodes (Same Barcode)** barcode.
3. Scan the numeric barcodes “2”, “5”, “0” and “0”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Factory Defaults

Scanning the following barcode can restore the scanner to the factory defaults.

You may need to reset all parameters to the factory defaults when:

- ✧ scanner is not properly configured so that it fails to decode barcodes.
- ✧ you forget previous configuration and want to avoid its impact.



0001000

【Restore All Factory Defaults】

Custom Defaults

Custom defaults make it possible to save the frequently-used settings on the scanner.

Scanning the **Save as Custom Defaults** barcode can save the current settings as custom defaults. Once custom default settings are stored, they can be recovered at any time by scanning the **Restore All Custom Defaults** barcode.

Custom defaults are stored in the non-volatile memory. Restoring the scanner to the factory defaults will not remove the custom defaults from the scanner.



0001150

【Save as Custom Defaults】



0001160

【Restore All Custom Defaults】

Inquire Product Information

You can scan the barcode below to inquire the scanner information (such as firmware version, model number, serial number, manufacture date). The result will be sent to the Host.



0006000

** 【Exit Setup】



0006010

【Enter Setup】



9876537

【Inquire Product Information】



0006000

****【Exit Setup】**



0006010

【Enter Setup】

Chapter 3 RS-232 Interface

Introduction

If the scanner is connected to the RS-232 port of a Host, you need to scan the following barcode to enable serial communication. To ensure smooth communication and accuracy of data, you need to set communication parameters (including baud rate, parity check, data bit and stop bit) to match the host device.



1100000

【RS-232】

RS-232 Parameters

When the scanner is connected to the Host via serial port, it is necessary to maintain consistency in communication parameters configuration on both devices to ensure smooth communication between them. The default settings are 9600bps, no parity check, 8 data bits, 1 stop bit, and no flow control.



0006000

****【Exit Setup】**



0006010

【Enter Setup】

Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the baud rate to match the Host requirements.



0100030

** 【Baud Rate 9600】



0100050

【Baud Rate 19200】



0100000

【Baud Rate 1200】



0100060

【Baud Rate 38400】



0100010

【Baud Rate 2400】



0100070

【Baud Rate 57600】



0100020

【Baud Rate 4800】



0100080

【Baud Rate 115200】



0100040

【Baud Rate 14400】



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Parity Check

When the number of data bits is set to 7, you can only select either **Even Parity** or **Odd Parity**. The **None** option will be regarded as **Even Parity** in this case.



0101000

** 【None】



0101020

【Odd Parity】



0101010

【Even Parity】

Data Bit

When the number of data bits is set to 7, you can only select either **Even Parity** or **Odd Parity**.



0103030

** 【8 Data Bits】



0103020

【7 Data Bits】

Data Bit & Parity Check



0006000

** 【Exit Setup】



0006010

【Enter Setup】



0105010

【7 Data Bits/Even Parity】



0105020

【7 Data Bits/Odd Parity】



0105030

**** 【8 Data Bits/ No Parity】**



0105040

【8 Data Bits/Even Parity】



0105050

【8 Data Bits/Odd Parity】

Stop Bit



0102000

**** 【1 Stop Bit】**



0102010

【2 Stop Bits】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Hardware Auto Flow Control

If CTS flow control is enabled, the scanner determines whether to transmit data based on CTS signal level. When CTS signal is at low level which means the serial port's cache memory of receiving device (such as PC) is full, the scanner stops sending data through serial port until CTS signal is set to high level by receiving device. If RTS flow control is enabled, whether the scanner receives data or not is dependent on RTS signal level. If the scanner is not ready for receiving, it will set RTS signal to low level. When sending device (such as PC) detects it, it will not send data to the scanner any more to prevent data loss.

If **No Flow Control** is selected, reception/transmission of serial data will not be influenced by RTS/CTS signal.



0104100

** 【No Flow Control】



0104110

【RTS Flow Control】



0104120

【CTS Flow Control】



0104130

【CTS/RTS Flow Control】



Before enabling hardware flow control, make sure that RTS/CTS signal line is contained in RS-232 cable. Without the signal line, RS-232 communication errors will occur.



0006000

** 【Exit Setup】



【Enter Setup】

Chapter 4 USB Interface

Introduction

There are two options for USB connection.

- ✧ USB HID-KBW: The scanner's transmission is simulated as USB keyboard input with no need for command configuration or a driver. The barcode data could be entered by the virtual keyboard directly and it is also convenient for the Host to receive data.
- ✧ USB COM Port Emulation: The USB port on the Host is emulated as a RS-232 port with the same data transmission and configuration as a real RS-232 port. A driver is needed.
- ✧ USB HID-POS: It is based on HID with no need for custom driver and is way more efficient in communication than keyboard emulation and traditional RS-232 interface.

USB Enumeration

If the scanner is connected to the Host via a USB connection, the scanner will be enumerated using S/N or "00000000" after power-up. **Enumeration using S/N** enables the Host to distinguish between scanners of same model. **Enumeration using "00000000"** disables the Host from distinguishing between scanners of same model.

Driver installation is required for each USB device distinguished from others by the Host in the process of enumeration.



【Enumeration Using S/N】



** 【Enumeration Using "00000000"】



** 【Exit Setup】



0006010

【Enter Setup】

USB HID-KBW

When the scanner is connected to the USB port on a Host, you can enable the USB HID-KBW feature by scanning the barcode below. Then scanner's transmission will be simulated as USB keyboard input. The Host receives keystrokes on the virtual keyboard. It works on a Plug and Play basis and no driver is required.



1100020

**** 【USB HID-KBW】**



If the Host allows keyboard input, then no extra software is needed for HID-KBW input.



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Polling Rate

This parameter specifies the polling rate for a USB keyboard. If the Host drops characters, change the polling rate to a bigger value.



1103170

**** 1ms**



1103171

2ms



1103172

3ms



1103173

4ms



1103174

5ms



1103175

6ms



1103176

7ms



 
1103177

8ms



1103178

9ms



1103179

10ms



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

USB Country Keyboard Types

Keyboard layouts vary from country to country. The default setting is 1-U.S. keyboard.



1103001

**** 【 U.S】**



1103002

【Japan】



1103003

【Denmark】



1103004

【Finland】



1103005

【France】



1103006

【Turkey_F】



1103007

【Italy】



1103008

【Norway】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】



1103222

【Spain】



1103226

【Turkey_Q】



1103227

【UK】



1103209

【Austria, Germany】



1103202

【Belgium】



1103220

【Russia】



1103223

【Sweden】



1103218

【Portugal】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

E
*sample***Set the scanner to get proper output for Russian encoded with Windows 1251:**

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Code Page** barcode from the “**Code Page**” section in Chapter 4.
3. Scan the numeric barcode “1” from Appendix.
4. Scan the **Save** barcode from Appendix.
5. Scan the appropriate **Default Character Encoding** barcode according to the symbology your application needs from the “**Character Encoding**” section in Chapter 5.
6. Scan the **Russia** barcode from the “**USB Country Keyboard Types**” section in Chapter 4.
7. Scan the **Mode 3** barcode from the “**Emulate ALT+Keypad**” section in Chapter 4.
8. Scan the **Exit Setup** barcode.

E
*sample***Set the scanner to get proper output for Russian encoded with UTF-8:**

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Code Page** barcode from the “**Code Page**” section in Chapter 4.
3. Scan the numeric barcode “1” from Appendix.
4. Scan the **Save** barcode from Appendix.
5. Scan the appropriate **UTF-8** barcode according to the symbology your application needs from the “**Character Encoding**” section in Chapter 5.
6. Scan the **Russia** barcode from the “**USB Country Keyboard Types**” section in Chapter 4.
7. Scan the **Mode 3** barcode from the “**Emulate ALT+Keypad**” section in Chapter 4.
8. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Beep on Unknown Character

Due to the differences in keyboard layouts, some characters contained in barcode data may be unavailable on the selected keyboard. As a result, the scanner fails to transmit the unknown characters.

Scan the appropriate barcode below to enable or disable the emission of beep when an unknown character is detected.



1103030

** 【Do Not Beep on Unknown Character】



1103031

【Beep on Unknown Character】

E
xample

Supposing French keyboard is selected and barcode data "ADF" is being dealt with, the keyboard will fail to locate the "D" (0xD0) character and the scanner will ignore the character and continue to process the next one.

Do Not Beep on Unknown Character: The scanner does not beep and the Host receives "AF".

Beep on Unknown Character: The scanner beeps and the Host still receives "AF".



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Inter-Keystroke Delay

This parameter specifies the delay between emulated keystrokes. It is programmable in 1ms increments from 0ms to 75ms. The default setting is 10ms.



1103050

【No Delay】



1103052

【Long Delay (40ms)】



1103051

【Short Delay (20ms)】



1103053

【Custom Delay】

E
sample

Set the inter-keystroke delay to 15ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Custom Delay** barcode.
3. Scan the numeric barcodes “1” and “5”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode.



0006000

**【Exit Setup】



0006010

【Enter Setup】

Convert Case

Scan the appropriate barcode below to convert barcode data to your desired case.



1103040

** 【No Case Conversion】



1103043

【Invert Upper and Lower Case Characters】



1103041

【Convert All to Upper Case】



1103042

【Convert All to Lower Case】

E
xample

When the **Invert Upper and Lower Case Characters** feature is enabled, barcode data “AbC” is transmitted as “aBc”.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Emulate ALT+Keypad

This feature allows any ASCII character (0x00 - 0xFF) to be sent over the numeric keypad no matter which keyboard type is selected. Since sending a character involves multiple keystroke emulations, this method appears less efficient.

The following options are available:

- **Disable:** No ASCII character is sent in the ALT+Keypad way.
- **Mode 1:** ASCII characters not supported by the selected keyboard type but falling into 0x20~0xFF are sent in the ALT+Keypad way.
- **Mode 2:** ASCII characters falling into 0x20~0xFF are sent in the ALT+Keypad way.
- **Mode 3:** All ASCII characters (0x00~0xFF) are sent in the ALT+Keypad way.

Note: In the event of a conflict between **Function Key Mapping** and **Mode 3, Function Key Mapping** shall govern.



1103060

** 【Disable】



1103061

【Mode 1】



1103062

【Mode 2】



1103063

【Mode 3】

E xample

Supposing US keyboard is selected, barcode data "ADF" (65/208/70) is sent as below:

(1) **Mode 1** is enabled:

"A" -- Keystroke "A"

"D" -- "ALT Make" + "208" + "ALT Break"

"F" -- Keystroke "F"

(2) **Mode 3** is enabled:

"A" -- "ALT Make" + "065" + "ALT Break"

"D" -- "ALT Make" + "208" + "ALT Break"

"F" -- "ALT Make" + "070" + "ALT Break"



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Function Key Mapping

When Function Key Mapping is enabled, function characters (0x00 - 0x1F) are sent as ASCII sequences over the keypad. For more information, see the “**ASCII Function Key Mapping Table**” section in Appendix.



1103140

【Enable Function Key Mapping】




1103130

** 【Disable Function Key Mapping】

E
xample

Barcode data 0x16

 T	Enable Function Key Mapping	Ctrl+V
	Disable Function Key Mapping	F1

Emulate Numeric Keypad

When this feature is disabled, sending barcode data is emulated as keystroke(s) on main keyboard.

To enable this feature, scan the **Emulate Numeric Keypad** barcode. Sending a number (0-9) is emulated as keystroke(s) on numeric keypad, whereas sending other characters like “+”, “_”, “*”, “/” and “.” is still emulated as keystrokes on main keyboard.



1103110

** 【Do Not Emulate Numeric Keypad】



1103120

【Emulate Numeric Keypad】



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Code Page

In order to support more international characters, the **Code Page** programming feature is provided. This feature is only effective when ASCII characters are sent in the ALT+Keypad way. Programming a code page requires scanning numeric barcode (For more information, see the “**Code Pages List**” section in Appendix.). The default code page is Windows 1252 (Latin I).



1103180

【Set the Code Page】

E
xample

Set the code page to Windows 1251 (Cyrillic)

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Code Page** barcode.
3. Scan the numeric barcode “1”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

USB COM Port Emulation

If your scanner is connected to the USB port on a Host, the USB COM Port Emulation feature allows the Host to receive data in the way as a serial port does. However, you need to set communication parameters on the scanner to match the Host requirements. To learn how to program communication parameters, see the **RS-232 Parameters** in Chapter 4. To use this feature, a driver is required.



1100060

【USB COM Port Emulation】

USB HID-POS

Introduction

The USB HID-POS interface is recommended for new application programs. It can send up to 56 characters in a single USB report and appears more efficient than keyboard emulation.

Features:

- ✧ HID based, no custom driver required.
- ✧ Way more efficient in communication than keyboard emulation and traditional RS-232 interface.

Note: USB HID-POS does not require a custom driver. However, a HID interface on Windows 98 does. All HID interfaces employ standard driver provided by the operating system. Use defaults when installing the driver.



1100080

USB HID-POS

Access the Scanner with Your Program

Use CreateFile to access the scanner as a HID device and then use ReadFile to deliver the scanned data to the application program. Use WriteFile to send data to the scanner.

For detailed information about USB and HID interfaces, go to www.USB.org.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Acquire Scanned Data

After scanning and decoding a barcode, the scanner sends the following input report:

	Bit							
Byte	7	6	5	4	3	2	1	0
0	Report ID = 0x02							
1	Length of the barcode							
2-57	Decoded data (1-56)							
58-60	AIM ID							
61-62	Reserved							
63	-	-	-	-	-	-	-	Decoded Data Continued

Send Data to the Scanner

This output report is used to send data to the device. All programming commands can be used.

	Bit							
Byte	7	6	5	4	3	2	1	0
0	Report ID = 0x04							
1	Length of the output data							
2-63	Output data (1-62)							

VID/PID

USB uses VID (Vendor ID) and PID (Product ID) to identify and locate a device. The VID is assigned by USB Implementers Forum. Newland's vendor ID is 1EAB (Hex). A PID is assigned to each interface.

Product	Interface	PID (Hex)	PID (Dec)
HR3260	USB HID-KBW	1303	4867
	USB COM Port Emulation	1306	4870
	USB HID-POS	1310	4880



0006000

**【Exit Setup】



0006010

【Enter Setup】

Chapter 5 Symbologies

Introduction

Every symbology (barcode type) has its own unique attributes. This chapter provides programming barcodes for configuring the scanner so that it can identify various barcode symbologies. The more symbologies you enable, the slower your scanner decodes. It is recommended to disable those that are rarely used to improve the performance of the scanner.

General Settings

Disable All Symbologies

If the **Disable All Symbologies** feature is enabled, the scanner can only identify the programming barcodes.



0001010

【Disable All Symbologies】

Enable All Symbologies

If the **Enable All Symbologies** feature is enabled, the scanner can read all compatible barcode symbologies as well as the programming barcodes.



0001020

【Enable All Symbologies】



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Enable 1D Symbologies



0001040

【Enable 1D Symbologies】

Disable 1D Symbologies



0001030

【Disable 1D Symbologies】

Enable 2D Symbologies



0001060

【Enable 2D Symbologies】

Disable 2D Symbologies



0001050

【Disable 2D Symbologies】



0006000

****【Exit Setup】**




0006010
【Enter Setup】

Video Reverse


Regular barcode: Dark image on a bright background.

Inverse barcode: Bright image on a dark background.

The examples of regular barcode and inverse barcode are shown below.

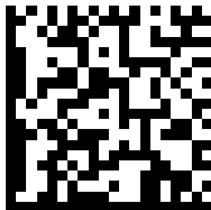

Regular Barcode

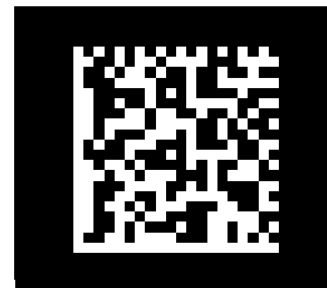

Inverse Barcode

Video Reverse is used to allow the scanner to read barcodes that are inverted.

Video Reverse ON: Read both regular barcodes and inverse barcodes.

Video Reverse OFF: Read regular barcodes only.

The scanner shows a slight decrease in scanning speed when Video Reverse is ON.



【Video Reverse ON】



** 【Video Reverse OFF】



0006000
** 【Exit Setup】



0006010

【Enter Setup】

Code 128

Restore Factory Defaults



0400000

【Restore the Factory Defaults of Code 128】

Enable/Disable Code 128



0400020

** 【Enable Code 128】



0400010

【Disable Code 128】



If the scanner fails to identify Code 128 barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable Code 128** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Set Length Range for Code 128

The scanner can be configured to only decode Code 128 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0400030

【Set the Minimum Length (Default: 1)】



0400040

【Set the Maximum Length (Default: 127)】



If minimum length is set to be greater than maximum length, the scanner only decodes Code 128 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 128 barcodes with that length are to be decoded.



Set the scanner to decode Code 128 barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

EAN-8

Restore Factory Defaults



0401000

【Restore the Factory Defaults of EAN-8】

Enable/Disable EAN-8



0401020

**** 【Enable EAN-8】**



0401010

【Disable EAN-8】

Transmit Check Digit

EAN-8 is 8 digits in length with the last one as its check digit used to verify the integrity of the data.



0401040

**** 【Transmit EAN-8 Check Digit】**



0401030

【Do Not Transmit EAN-8 Check Digit】



0006000

**** 【Exit Setup】**



【Enter Setup】

Add-On Code

An EAN-8 barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is an EAN-8 barcode while the part circled by red dotted line is add-on code.



** 【Disable 2-Digit Add-On Code】



【Enable 2-Digit Add-On Code】



** 【Disable 5-Digit Add-On Code】



【Enable 5-Digit Add-On Code】



Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The scanner decodes a mix of EAN-8 barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The scanner decodes EAN-8 and ignores the add-on code when presented with an EAN-8 plus add-on barcode. It can also decode EAN-8 barcodes without add-on codes.



** 【Exit Setup】



0006010

【Enter Setup】

Add-On Code Required

EAN-8 Add-On Code Required: The scanner only decodes EAN-8 barcodes that contain add-on codes.

EAN-8 Add-On Code Not Required: The scanner decodes a mix of EAN-8 barcodes with and without add-on codes.



0401110

【EAN-8 Add-On Code Required】



0401120

** 【EAN-8 Add-On Code Not Required】

EAN-8 Extension

Disable EAN-8 Zero Extend: Transmit EAN-8 barcodes as is.

Enable EAN-8 Zero Extend: Add five leading zeros to decoded EAN-8 barcodes to extend to 13 digits.



0401090

** 【Disable EAN-8 Zero Extend】



0401100

【Enable EAN-8 Zero Extend】



0006000

** 【Exit Setup】



0006010

【Enter Setup】

EAN-13

Restore Factory Defaults



0402000

**** 【Restore the Factory Defaults of EAN-13】**

Enable/Disable EAN-13



0402020

**** 【Enable EAN-13】**



0402010

【Disable EAN-13】

Transmit Check Digit



0402040

**** 【Transmit EAN-13 Check Digit】**



0402030

【Do Not Transmit EAN-13 Check Digit】



0006000

**** 【Exit Setup】**



【Enter Setup】

Add-On Code

An EAN-13 barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is an EAN-13 barcode while the part circled by red dotted line is add-on code.



** 【Disable 2-Digit Add-On Code】



【Enable 2-Digit Add-On Code】



** 【Disable 5-Digit Add-On Code】



【Enable 5-Digit Add-On Code】



Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The scanner decodes a mix of EAN-13 barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The scanner decodes EAN-13 and ignores the add-on code when presented with an EAN-13 plus add-on barcode. It can also decode EAN-13 barcodes without add-on codes.



** 【Exit Setup】



0006010

【Enter Setup】

Add-On Code Required

EAN-13 Add-On Code Required: The scanner only decodes EAN-13 barcodes that contain add-on codes.

EAN-13 Add-On Code Not Required: The scanner decodes a mix of EAN-13 barcodes with and without add-on codes.



0402090

【EAN-13 Add-On Code Required】



0402100

** 【EAN-13 Add-On Code Not Required】



0006000

** 【Exit Setup】



0006010

【Enter Setup】

UPC-E

Restore Factory Defaults



0403000

**** 【Restore the Factory Defaults of UPC-E】**

Enable/Disable UPC-E



0403020

**** 【Enable UPC-E】**



0403010

【Disable UPC-E】



If the scanner fails to identify UPC-E barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable UPC-E** barcode.

Transmit Check Digit

UPC-E is 8 digits in length with the last one as its check digit used to verify the integrity of the data.



0403040

**** 【Transmit UPC-E Check Digit】**



0403030

【Do Not Transmit UPC-E Check Digit】



0006000

**** 【Exit Setup】**



【Enter Setup】

Add-On Code

A UPC-E barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is a UPC-E barcode while the part circled by red dotted line is add-on code.



** 【Disable 2-Digit Add-On Code】



【Enable 2-Digit Add-On Code】



** 【Disable 5-Digit Add-On Code】



【Enable 5-Digit Add-On Code】



Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The scanner decodes a mix of UPC-E barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The scanner decodes UPC-E and ignores the add-on code when presented with a UPC-E plus add-on barcode. It can also decode UPC-E barcodes without add-on codes.



** 【Exit Setup】



0006010

【Enter Setup】

Add-On Code Required

UPC-E Add-On Code Required: The scanner only decodes UPC-E barcodes that contain add-on codes.

UPC-E Add-On Code Not Required: The scanner decodes a mix of UPC-E barcodes with and without add-on codes.



0403130

【UPC-E Add-On Code Required】



0403140

**** 【UPC-E Add-On Code Not Required】**

Transmit System Character “0”

The first character of UPC-E barcode is the system character “0”.



0403090

【Do Not Transmit System Character “0”】



0403100

**** 【Transmit System Character “0”】**



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

UPC-E Extension

Disable UPC-E Extend: Transmit UPC-E barcodes as is.

Enable UPC-E Extend: Extend UPC-E barcodes to make them compatible in length to UPC-A.



0403110

** 【Disable UPC-E Extend】



0403120

【Enable UPC-E Extend】



0006000

** 【Exit Setup】



0006010

【Enter Setup】

UPC-A

Restore Factory Defaults



0404000

Restore the Factory Defaults of UPC-A】

Enable/Disable UPC-A



0404020

**** 【Enable UPC-A】**



0404010

【Disable UPC-A】



If the scanner fails to identify UPC-A barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable UPC-A** barcode.

Transmit Check Digit

UPC-A is 12 digits in length with the last one as its check digit used to verify the integrity of the data.



0404040

**** 【Transmit UPC-A Check Digit】**



0404030

【Do Not Transmit UPC-A Check Digit】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Add-On Code

A UPC-A barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is a UPC-A barcode while the part circled by red dotted line is add-on code.



0404050

** 【Disable 2-Digit Add-On Code】



0404060

【Enable 2-Digit Add-On Code】



0404070

** 【Disable 5-Digit Add-On Code】



0404080

【Enable 5-Digit Add-On Code】



Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The scanner decodes a mix of UPC-A barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The scanner decodes UPC-A and ignores the add-on code when presented with a UPC-A plus add-on barcode. It can also decode UPC-A barcodes without add-on codes.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Add-On Code Required

UPC-A Add-On Code Required: The scanner only decodes UPC-A barcodes that contain add-on codes.

UPC-A Add-On Code Not Required: The scanner decodes a mix of UPC-A barcodes with and without add-on codes.



0404110

【UPC-A Add-On Code Required】



0404120

**** 【UPC-A Add-On Code Not Required】**

Transmit Preamble Character “0”

The preamble character “0” is part of the UPC-A barcode.



0404090

**** 【Do Not Transmit Preamble Character “0”】**



0404100

【Transmit Preamble Character “0”】



The preamble character “0” usually does not appear in printed UPC-A barcodes.



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Interleaved 2 of 5

Restore Factory Defaults



0405000

【Restore the Factory Defaults of Interleaved 2 of 5】

Enable/Disable Interleaved 2 of 5



0405020

** 【Enable Interleaved 2 of 5】



0405010

【Disable Interleaved 2 of 5】



If the scanner fails to identify Interleaved 2 of 5 barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable Interleaved 2 of 5** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Set Length Range for Interleaved 2 of 5

The scanner can be configured to only decode Interleaved 2 of 5 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0405030

【Set the Minimum Length (Default: 6)】



0405040

【Set the Maximum Length (Default: 100)】



If minimum length is set to be greater than maximum length, the scanner only decodes Interleaved 2 of 5 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Interleaved 2 of 5 barcodes with that length are to be decoded.



Set the scanner to decode Interleaved 2 of 5 barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Check Digit Verification

A check digit is optional for Interleaved 2 of 5 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The scanner transmits Interleaved 2 of 5 barcodes as is.

Do Not Transmit Check Digit After Verification: The scanner checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The scanner checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.

Since Interleaved 2 of 5 must always have an even number of digits, a zero may need to be added as the first digit when the check digit is added. The check digit is automatically generated when making Interleaved 2 of 5 barcodes.



0405050

** 【Disable】



0405060

【Do Not Transmit Check Digit After Verification】



0405070

【Transmit Check Digit After Verification】



If the **Do Not Transmit Check Digit After Verification** option is enabled, Interleaved 2 of 5 barcodes with a length that is less than the configured minimum length after having the check digit excluded will not be decoded. (For example, when the **Do Not Transmit Check Digit After Verification** option is enabled and the minimum length is set to 4, Interleaved 2 of 5 barcodes with a total length of 4 characters including the check digit cannot be read.)



0006000

** 【Exit Setup】



0006010

【Enter Setup】

ITF-14

ITF-14 is a special kind of Interleaved 2 of 5 with a length of 14 characters and the last character as the check character.



0405260

【Restore the Factory Defaults of ITF-14】



0405080

**** 【Disable ITF-14】**



0405090

【Enable ITF-14 But Do Not Transmit Check Digit】



0405100

【Enable ITF-14 and Transmit Check Digit】



It is advisable not to enable ITF-14 and Interleaved 2 of 5 at the same time.



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

ITF-6

ITF-6 is a special kind of Interleaved 2 of 5 with a length of 6 characters and the last character as the check character.



0405270

【Restore the Factory Defaults of ITF-6】



0405110

**** 【Disable ITF-6】**



0405120

【Enable ITF-6 But Do Not Transmit Check Digit】



0405130

【Enable ITF-6 and Transmit Check Digit】



It is advisable not to enable ITF-6 and Interleaved 2 of 5 at the same time.



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Matrix 2 of 5

Restore Factory Defaults



0406000

【Restore the Factory Defaults of Matrix 2 of 5】

Enable/Disable Matrix 2 of 5



0406020

【Enable Matrix 2 of 5】



0406010

** 【Disable Matrix 2 of 5】



If the scanner fails to identify Matrix 2 of 5 barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable Matrix 2 of 5** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Set Length Range for Matrix 2 of 5

The scanner can be configured to only decode Matrix 2 of 5 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0406030

【Set the Minimum Length (Default: 6)】



0406040

【Set the Maximum Length (Default: 127)】



If minimum length is set to be greater than maximum length, the scanner only decodes Matrix 2 of 5 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Matrix 2 of 5 barcodes with that length are to be decoded.



Set the scanner to decode Matrix 2 of 5 barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Check Digit Verification

A check digit is optional for Matrix 2 of 5 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The scanner transmits Matrix 2 of 5 barcodes as is.

Do Not Transmit Check Digit After Verification: The scanner checks the integrity of all Matrix 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The scanner checks the integrity of all Matrix 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.

Since Matrix 2 of 5 must always have an even number of digits, a zero may need to be added as the first digit when the check digit is added. The check digit is automatically generated when making Matrix 2 of 5 barcodes.



0406050

【Disable】



0406060

** 【Do Not Transmit Check Digit After Verification】



0406070

【Transmit Check Digit After Verification】



If the **Do Not Transmit Check Digit After Verification** option is enabled, Matrix 2 of 5 barcodes with a length that is less than the configured minimum length after having the check digit excluded will not be decoded. (For example, when the **Do Not Transmit Check Digit After Verification** option is enabled and the minimum length is set to 4, Matrix 2 of 5 barcodes with a total length of 4 characters including the check digit cannot be read.)



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Code 39

Restore Factory Defaults



0408000

【Restore the Factory Defaults of Code 39】

Enable/Disable Code 39



0408020

** 【Enable Code 39】



0408010

【Disable Code 39】



If the scanner fails to identify Code 39 barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable Code 39** barcode.

Transmit Start/Stop Character

Code 39 uses an asterisk (*) for both the start and the stop characters. You can choose whether or not to transmit the start/stop characters by scanning the appropriate barcode below.



0408090

【Transmit Start/Stop Character】



0408080

** 【Do Not Transmit Start/Stop Character】



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Set Length Range for Code 39

The scanner can be configured to only decode Code 39 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0408030

【Set the Minimum Length (Default: 2)】



0408040

【Set the Maximum Length (Default: 127)】



If minimum length is set to be greater than maximum length, the scanner only decodes Code 39 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 39 barcodes with that length are to be decoded.



Set the scanner to decode Code 39 barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Check Digit Verification

A check digit is optional for Code 39 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The scanner transmits Code 39 barcodes as is.

Do Not Transmit Check Digit After Verification: The scanner checks the integrity of all Code 39 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The scanner checks the integrity of all Code 39 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



0408050

** 【Disable】



0408060

【Do Not Transmit Check Digit After Verification】



0408070

【Transmit Check Digit After Verification】



If the **Do Not Transmit Check Digit After Verification** option is enabled, Code 39 barcodes with a length that is less than the configured minimum length after having the check digit excluded will not be decoded. (For example, when the **Do Not Transmit Check Digit After Verification** option is enabled and the minimum length is set to 4, Code 39 barcodes with a total length of 4 characters including the check digit cannot be read.)



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Enable/Disable Code 39 Full ASCII

The scanner can be configured to identify all ASCII characters by scanning the appropriate barcode below.



0408100

【Disable Code 39 Full ASCII】



0408110

**** 【Enable Code 39 Full ASCII】**



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Codabar

Restore Factory Defaults



0409000

【Restore the Factory Defaults of Codabar】

Enable/Disable Codabar



0409020

** 【Enable Codabar】



0409010

【Disable Codabar】



If the scanner fails to identify Codabar barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable Codabar** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Set Length Range for Codabar

The scanner can be configured to only decode Codabar barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0409030

【Set the Minimum Length (Default: 4)】



0409040

【Set the Maximum Length (Default: 127)】



If minimum length is set to be greater than maximum length, the scanner only decodes Codabar barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Codabar barcodes with that length are to be decoded.



Set the scanner to decode Codabar barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

**【Exit Setup】



0006010

【Enter Setup】

Check Digit Verification

A check digit is optional for Codabar and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The scanner transmits Codabar barcodes as is.

Do Not Transmit Check Digit After Verification: The scanner checks the integrity of all Codabar barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The scanner checks the integrity of all Codabar barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



0409050

** 【Disable】



0409060

【Do Not Transmit Check Digit After Verification】



0409070

【Transmit Check Digit After Verification】



If the **Do Not Transmit Check Digit After Verification** option is enabled, Codabar barcodes with a length that is less than the configured minimum length after having the check digit excluded will not be decoded. (For example, when the **Do Not Transmit Check Digit After Verification** option is enabled and the minimum length is set to 4, Codabar barcodes with a total length of 4 characters including the check digit cannot be read.)



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Start/Stop Character

You can set the start/stop characters and choose whether or not to transmit the start/stop characters by scanning the appropriate barcode below.



0409090

【Transmit Start/Stop Character】



0409080

**** 【Do Not Transmit Start/Stop Character】**



0409100

**** 【ABCD/ABCD as the Start/Stop Character】**



0409120

【Start/Stop Character in Uppercase】



0409110

【ABCD/TN*E as the Start/Stop Character】



0409130

【Start/Stop Character in Lowercase】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Code 93

Restore Factory Defaults



0410000

【Restore the Factory Defaults of Code 93】

Enable/Disable Code 93



0410020

** 【Enable Code 93】



0410010

【Disable Code 93】



If the scanner fails to identify Code 93 barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable Code 93** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Set Length Range for Code 93

The scanner can be configured to only decode Code 93 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0410030

【Set the Minimum Length (Default: 3)】



0410040

【Set the Maximum Length (Default: 127)】



If minimum length is set to be greater than maximum length, the scanner only decodes Code 93 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 93 barcodes with that length are to be decoded.



Set the scanner to decode Code 93 barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Check Digit Verification

Check digits are optional for Code 93 and can be added as the last two digits, which are calculated values used to verify the integrity of the data.

Disable: The scanner transmits Code 93 barcodes as is.

Do Not Transmit Check Digit After Verification: The scanner checks the integrity of all Code 93 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted except the last two digits, whereas those failing them will not be transmitted.

Transmit Check Digit After Verification: The scanner checks the integrity of all Code 93 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted, whereas those failing them will not be transmitted.



0410050

【Disable】



0410060

** 【Do Not Transmit Check Digit After Verification】



0410070

【Transmit Check Digit After Verification】



If the **Do Not Transmit Check Digit After Verification** option is enabled, Code 93 barcodes with a length that is less than the configured minimum length after having the two check digits excluded will not be decoded. (For example, when the **Do Not Transmit Check Digit After Verification** option is enabled and the minimum length is set to 4, Code 93 barcodes with a total length of 4 characters including the two check digits cannot be read.)



0006000

** 【Exit Setup】



0006010

【Enter Setup】

UCC/EAN-128

Restore Factory Defaults



0412000

【Restore the Factory Defaults of UCC/EAN-128】

Enable/Disable UCC/EAN-128



0412020

**** 【Enable UCC/EAN-128】**



0412010

【Disable UCC/EAN-128】



If the scanner fails to identify UCC/EAN-128 barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable UCC/EAN-128** barcode.



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Set Length Range for UCC/EAN-128

The scanner can be configured to only decode UCC/EAN-128 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0412030

【Set the Minimum Length (Default: 1)】



0412040

【Set the Maximum Length (Default: 127)】



If minimum length is set to be greater than maximum length, the scanner only decodes UCC/EAN-128 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only UCC/EAN-128 barcodes with that length are to be decoded.



Set the scanner to decode UCC/EAN-128 barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

GS1 Databar

Restore Factory Defaults



0413000

【Restore the Factory Defaults of GS1 Databar】

Enable/Disable GS1 Databar



0413020

**** 【Enable GS1 Databar】**



0413010

【Disable GS1 Databar】



If the scanner fails to identify GS1 Databar barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable GS1 Databar** barcode.

Transmit Application Identifier “01”



0413060

**** 【Transmit Application Identifier “01”】**



0413050

【Do Not Transmit Application Identifier “01”】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Code 11

Restore Factory Defaults



0415000

【Restore the Factory Defaults of Code 11】

Enable/Disable Code 11



0415020

** 【Enable Code 11】



0415010

【Disable Code 11】



If the scanner fails to identify Code 11 barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable Code 11** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Set Length Range for Code 11

The scanner can be configured to only decode Code 11 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0415030

【Set the Minimum Length (Default: 2)】



0415040

【Set the Maximum Length (Default: 127)】



If minimum length is set to be greater than maximum length, the scanner only decodes Code 11 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 11 barcodes with that length are to be decoded.



Set the scanner to decode Code 11 barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

**【Exit Setup】



0006010

【Enter Setup】

Check Digit Verification

Check digits are optional for Code 11 and can be added as the last one or two digits, which are calculated values used to verify the integrity of the data.

If the **Disable** option is enabled, the scanner transmits Code 11 barcodes as is.



0415050

【Disable】



0415090

【One Check Digit, MOD11 (Len<=10)】

【Two Check Digits, MOD11/MOD11(Len>10)】



0415060

** 【One Check Digit, MOD11】



0415100

【One Check Digit, MOD11 (Len<=10)】

【Two Check Digits, MOD11/MOD9 (Len>10)】



0415070

【Two Check Digits, MOD11/MOD11】



0415110

** 【Do Not Transmit Check Digit】



0415080

【Two Check Digits, MOD11/MOD9】



0415120

【Transmit Check Digit】



If you select a check digit algorithm and the **Do Not Transmit Check Digit** option, Code 11 barcodes with a length that is less than the configured minimum length after having the check digit(s) excluded will not be decoded. (For example, when the **One Check Digit, MOD11** and **Do Not Transmit Check Digit** options are enabled and the minimum length is set to 4, Code 11 barcodes with a total length of 4 characters including the check digit cannot be read.)



0006000

** 【Exit Setup】



0006010

【Enter Setup】

ISBN

Restore Factory Defaults



0416000

【Restore the Factory Defaults of ISBN】

Enable/Disable ISBN



0416020

【Enable ISBN】



0416010

**** 【Disable ISBN】**



If the scanner fails to identify ISBN barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable ISBN** barcode.

Set ISBN Format



0416030

**** 【ISBN-13】**



0416040

【ISBN-10】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Add-On Code

An ISBN barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0416050

【Enable 2-Digit Add-On Code】



0416060

** 【Disable 2-Digit Add-On Code】



0416070

【Enable 5-Digit Add-On Code】



0416080

** 【Disable 5-Digit Add-On Code】



Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The scanner decodes a mix of ISBN barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The scanner decodes ISBN and ignores the add-on code when presented with an ISBN plus add-on barcode. It can also decode ISBN barcodes without add-on codes.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Add-On Code Required

ISBN Add-On Code Required: The scanner only decodes ISBN barcodes that contain add-on codes.

ISBN Add-On Code Not Required: The scanner decodes a mix of ISBN barcodes with and without add-on codes.



0416090

【ISBN Add-On Code Required】



0416100

**** 【ISBN Add-On Code Not Required】**



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

ISSN

Restore Factory Defaults



0421000

【Restore the Factory Defaults of ISSN】

Enable/Disable ISSN



0421020

【Enable ISSN】



0421010

** 【Disable ISSN】



If the scanner fails to identify ISSN barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable ISSN** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Add-On Code

An ISSN barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0421030

【Enable 2-Digit Add-On Code】



0421040

**** 【Disable 2-Digit Add-On Code】**



0421050

【Enable 5-Digit Add-On Code】



0421060

**** 【Disable 5-Digit Add-On Code】**



Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The scanner decodes a mix of ISSN barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The scanner decodes ISSN and ignores the add-on code when presented with an ISSN plus add-on barcode. It can also decode ISSN barcodes without add-on codes.



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Add-On Code Required

ISSN Add-On Code Required: The scanner only decodes ISSN barcodes that contain add-on codes.

ISSN Add-On Code Not Required: The scanner decodes a mix of ISSN barcodes with and without add-on codes.



0421070

【ISSN Add-On Code Required】



0421080

** 【ISSN Add-On Code Not Required】



0006000

** 【Exit Setup】



0006010

【Enter Setup】

AIM-128

Restore Factory Defaults



0423000

【Restore the Factory Defaults of AIM-128】

Enable/Disable AIM-128



0423020

** 【Enable AIM-128】



0423010

【Disable AIM-128】



If the scanner fails to identify AIM-128 barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable AIM-128** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Set Length Range for AIM-128

The scanner can be configured to only decode AIM-128 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0423030

【Set the Minimum Length (Default: 1)】



0423040

【Set the Maximum Length (Default: 127)】



If minimum length is set to be greater than maximum length, the scanner only decodes AIM-128 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only AIM-128 barcodes with that length are to be decoded.



Set the scanner to decode AIM-128 barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Industrial 25

Restore Factory Defaults



0417000

【Restore the Factory Defaults of Industrial 25】

Enable/Disable Industrial 25



0417020

** 【Enable Industrial 25】



0417010

【Disable Industrial 25】



If the scanner fails to identify Industrial 25 barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable Industrial 25** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Set Length Range for Industrial 25

The scanner can be configured to only decode Industrial 25 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0417030

【Set the Minimum Length (Default: 6)】



0417040

【Set the Maximum Length (Default: 127)】



If minimum length is set to be greater than maximum length, the scanner only decodes Industrial 25 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Industrial 25 barcodes with that length are to be decoded.



Set the scanner to decode Industrial 25 barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Check Digit Verification

A check digit is optional for Industrial 25 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The scanner transmits Industrial 25 barcodes as is.

Do Not Transmit Check Digit After Verification: The scanner checks the integrity of all Industrial 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The scanner checks the integrity of all Industrial 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



0417050

** 【Disable】



0417060

【Do Not Transmit Check Digit After Verification】



0417070

【Transmit Check Digit After Verification】



If the **Do Not Transmit Check Digit After Verification** option is enabled, Industrial 25 barcodes with a length that is less than the configured minimum length after having the check digit excluded will not be decoded. (For example, when the **Do Not Transmit Check Digit After Verification** option is enabled and the minimum length is set to 4, Industrial 25 barcodes with a total length of 4 characters including the check digit cannot be read.)



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Standard 25

Restore Factory Defaults



0418000

【Restore the Factory Defaults of Standard 25】

Enable/Disable Standard 25



0418020

** 【Enable Standard 25】



0418010

【Disable Standard 25】



If the scanner fails to identify Standard 25 barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable Standard 25** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Set Length Range for Standard 25

The scanner can be configured to only decode Standard 25 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0418030

【Set the Minimum Length (Default: 6)】

0418040

【Set the Maximum Length (Default: 127)】

If minimum length is set to be greater than maximum length, the scanner only decodes Standard 25 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Standard 25 barcodes with that length are to be decoded.



Set the scanner to decode Standard 25 barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

****【Exit Setup】**



0006010

【Enter Setup】

Check Digit Verification

A check digit is optional for Standard 25 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The scanner transmits Standard 25 barcodes as is.

Do Not Transmit Check Digit After Verification: The scanner checks the integrity of all Standard 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The scanner checks the integrity of all Standard 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



0418050

** 【Disable】



0418060

【Do Not Transmit Check Digit After Verification】



0418070

【Transmit Check Digit After Verification】



If the **Do Not Transmit Check Digit After Verification** option is enabled, Standard 25 barcodes with a length that is less than the configured minimum length after having the check digit excluded will not be decoded. (For example, when the **Do Not Transmit Check Digit After Verification** option is enabled and the minimum length is set to 4, Standard 25 barcodes with a total length of 4 characters including the check digit cannot be read.)



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Plessey

Restore Factory Defaults



0419000

【Restore the Factory Defaults of Plessey】

Enable/Disable Plessey



0419020

【Enable Plessey】



0419010

** 【Disable Plessey】



If the scanner fails to identify Plessey barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable Plessey** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Set Length Range for Plessey

The scanner can be configured to only decode Plessey barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0419030

【Set the Minimum Length (Default: 1)】



0419040

【Set the Maximum Length (Default: 127)】



If minimum length is set to be greater than maximum length, the scanner only decodes Plessey barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Plessey barcodes with that length are to be decoded.



Set the scanner to decode Plessey barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Check Digit Verification

Check digits are optional for Plessey and can be added as the last two digits, which are calculated values used to verify the integrity of the data.

Disable: The scanner transmits Plessey barcodes as is.

Do Not Transmit Check Digit After Verification: The scanner checks the integrity of all Plessey barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted except the last two digits, whereas those failing them will not be transmitted.

Transmit Check Digit After Verification: The scanner checks the integrity of all Plessey barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted, whereas those failing them will not be transmitted.



0419050

【Disable】

0419060

**** 【Do Not Transmit Check Digit After Verification】**

0419070

【Transmit Check Digit After Verification】

If the **Do Not Transmit Check Digit After Verification** option is enabled, Plessey barcodes with a length that is less than the configured minimum length after having the check digits excluded will not be decoded. (For example, when the **Do Not Transmit Check Digit After Verification** option is enabled and the minimum length is set to 4, Plessey barcodes with a total length of 4 characters including the check digits cannot be read.)



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

MSI-Plessey

Restore Factory Defaults



0420000

【Restore the Factory Defaults of MSI-Plessey】

Enable/Disable MSI-Plessey



0420020

【Enable MSI-Plessey】



0420010

** 【Disable MSI-Plessey】



If the scanner fails to identify MSI-Plessey barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable MSI-Plessey** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Set Length Range for MSI-Plessey

The scanner can be configured to only decode MSI-Plessey barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0420030

【Set the Minimum Length (Default: 2)】



0420040

【Set the Maximum Length (Default: 127)】



If minimum length is set to be greater than maximum length, the scanner only decodes MSI-Plessey barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only MSI-Plessey barcodes with that length are to be decoded.



Set the scanner to decode MSI-Plessey barcodes containing between 8 and 12 characters:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Check Digit Verification

Check digits are optional for MSI-Plessey and can be added as the last one or two digits, which are calculated values used to verify the integrity of the data.

If the **Disable** option is enabled, the scanner transmits MSI-Plessey barcodes as is.



0420050

【Disable】



0420080

【Two Check Digits, MOD10/MOD11】



0420060

** 【One Check Digit, MOD10】



0420090

** 【Do Not Transmit Check Digit】



0420070

【Two Check Digits, MOD10/MOD10】



0420100

【Transmit Check Digit】



If you select a check digit algorithm and the **Do Not Transmit Check Digit** option, MSI-Plessey barcodes with a length that is less than the configured minimum length after having the check digit(s) excluded will not be decoded. (For example, when the **One Check Digit, MOD11** and **Do Not Transmit Check Digit** options are enabled and the minimum length is set to 4, MSI-Plessey barcodes with a total length of 4 characters including the check digit cannot be read.)



0006000

** 【Exit Setup】



0006010

【Enter Setup】

PDF417

Restore Factory Defaults



0501000

**** 【Restore the Factory Defaults of PDF417】**

Enable/Disable PDF417



0501020

**** 【Enable PDF417】**



0501010

【Disable PDF417】



If the scanner fails to identify PDF417 barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable PDF417** barcode.



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Set Length Range for PDF417

The scanner can be configured to only decode PDF417 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0501030

【Set the Minimum Length (Default: 1)】



0501040

【Set the Maximum Length (Default: 2710)】



Minimum length is not allowed to be greater than maximum length. If you only want to read PDF417 barcodes with a specific length, set both minimum and maximum lengths to be that desired length.



Set the scanner to decode PDF417 barcodes containing between 8 and 12 bytes:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

PDF 417 Twin Code

PDF417 twin code is 2 PDF417 barcodes paralleled vertically or horizontally. Two of them must have the same direction and similar specifications and be placed closely together.

There are 3 options for reading PDF417 twin codes:

Single PDF417 Only: Read either PDF417 code.

Twin PDF417 Only: Read both PDF417 codes.

Both Single & Twin: Read both PDF417 codes. If successful, transmit as twin PDF417 only. Otherwise, try single PDF417 only.



0501070

**** 【Single PDF417 Only】**



0501080

【Twin PDF417 Only】



0501090

【Both Single & Twin】

Transmission order of twin code

Order 1: Transmit the one containing more information first.

Order 2: Transmit the one containing less information first.



0501110

**** 【Order 1】**



0501100

【Order 2】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Character Encoding



0501350

**** 【Default Character Encoding】**



0501351

【UTF-8】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

QR Code

Restore Factory Defaults



0502000

【Restore the Factory Defaults of QR Code】

Enable/Disable QR Code



0502020

**** 【Enable QR Code】**



0502010

【Disable QR Code】



If the scanner fails to identify QR Code barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable QR Code** barcode.



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Set Length Range for QR Code

The scanner can be configured to only decode QR Code barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0502030

【Set the Minimum Length (Default: 1)】



0502040

【Set the Maximum Length (Default: 7089)】



Minimum length is not allowed to be greater than maximum length. If you only want to read QR Code barcodes with a specific length, set both minimum and maximum lengths to be that desired length.



Set the scanner to decode QR Code barcodes containing between 8 and 12 bytes:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Micro QR



0502110

**** 【Enable Micro QR】**



0502100

【Disable Micro QR】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

QR Twin Code

QR twin code is 2 QR barcodes paralleled vertically or horizontally. Two of them must have the same direction and similar specifications and be placed closely together.

There are 3 options for reading QR twin codes:

Single QR Only: Read either QR code.

Twin QR Only: Read both QR codes.

Both Single & Twin: Read both QR codes. If successful, transmit as twin QR only. Otherwise, try single QR only.



0502070

** 【Single QR Only】



0502080

【Twin QR Only】



0502090

【Both Single & Twin】

Transmission order of twin code

Order 1: Transmit the one containing more information first.

Order 2: Transmit the one containing less information first.

Order 3: If the twin code is paralleled horizontally, transmit the one on the left first; if it is paralleled vertically, transmit the one in the upper position first.



0502140

【Order 1】



0502130

【Order 2】



0502120

** 【Order 3】



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Character Encoding



0502160

**** 【Default Character Encoding】**



0502161

【UTF-8】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Data Matrix

Restore Factory Defaults



0504000

【Restore the Factory Defaults of Data Matrix】

Enable/Disable Data Matrix



0504020

**** 【Enable Data Matrix】**



0504010

【Disable Data Matrix】



If the scanner fails to identify Data Matrix barcodes, you may first try this solution by scanning the **Enter Setup** barcode and then **Enable Data Matrix** barcode.



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Set Length Range for Data Matrix

The scanner can be configured to only decode Data Matrix barcodes with lengths that fall between (inclusive) the minimum and maximum lengths. To accomplish it, you need to set the minimum and maximum lengths.



0504030

【Set the Minimum Length (Default: 1)】



0504040

【Set the Maximum Length (Default: 3116)】



Minimum length is not allowed to be greater than maximum length. If you only want to read Data Matrix barcodes with a specific length, set both minimum and maximum lengths to be that desired length.



Set the scanner to decode Data Matrix barcodes containing between 8 and 12 bytes:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the ***Digit Barcodes*** in **Appendix**)
4. Scan the **Save** barcode. (See the ***Save/Cancel Barcodes*** in **Appendix**)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Rectangular Barcode

Data Matrix has two formats:

Square barcodes having the same amount of modules in length and width: 10*10, 12*12.... 144*144.

Rectangular barcodes having different amounts of models in length and width: 6*16, 6*14... 14*22.



0504110

**** 【Enable Rectangular Barcode】**



0504100

【Disable Rectangular Barcode】

Mirror Image



0504331

**** 【Decode Mirrored DM】**



0504330

【Do Not Decode Mirrored DM】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Data Matrix Twin Code

Data Matrix twin code is 2 Data Matrix barcodes paralleled vertically or horizontally. Two of them must have the same direction and similar specifications and be placed closely together.

There are 3 options for reading Data Matrix twin codes:

Single Data Matrix Only: Read either Data Matrix code.

Twin Data Matrix Only: Read both Data Matrix codes. Transmission order: Data Matrix code on the left (in the upper position) followed by the one on the right (in the lower position).

Both Single & Twin: Read both Data Matrix codes. If successful, transmit as twin Data Matrix only. Otherwise, try single Data Matrix only.



0504070

**** 【Single Data Matrix Only】**

0504080

【Twin Data Matrix Only】

0504090

【Both Single & Twin】

Character Encoding



0504350

**** 【Default Character Encoding】**

0504351

【UTF-8】

0006000

**** 【Exit Setup】**



0006010
【Enter Setup】

Chapter 6 Prefix & Suffix

Introduction

A 1D barcode could contain digits, letters, symbols, etc. A 2D barcode could contain more data, such as Chinese characters and other multi-byte characters. However, in real applications, they do not and should not have all information we need, such as barcode type, data acquisition time and delimiter, in order to keep the barcodes short and flexible.

Prefix and suffix are how to fulfill the needs mentioned above. They can be added, removed and modified while the original barcode data remains intact.



0006000
** 【Exit Setup】



0006010

【Enter Setup】

General Settings

Enable/Disable All Prefix/Suffix

Disable All Prefix/Suffix: Transmit barcode data with no prefix/suffix.

Enable All Prefix/Suffix: Allow user to append Code ID prefix, AIM ID prefix, custom prefix/suffix and terminating character to the barcode data before the transmission.



0311000

【Disable All Prefix/Suffix】



0311010

【Enable All Prefix/Suffix】

Prefix Sequences

2 prefix sequence options:



0317010

【Code ID + Custom + AIM ID】



0317040

**** 【Custom + Code ID + AIM ID】**



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Custom Prefix

Enable/Disable Custom Prefix

If custom prefix is enabled, you are allowed to append to the data a user-defined prefix that cannot exceed 11 characters. For example, if the custom prefix is “AB” and the barcode data is “123”, the Host will receive “AB123”.



0305000

** 【Disable Custom Prefix】



0305010

【Enable Custom Prefix】

Set Custom Prefix

To set a custom prefix, scan the **Set Custom Prefix** barcode, the numeric barcodes corresponding to the hexadecimal value of a desired prefix, and the **Save** barcode.

Note: A custom prefix cannot exceed 11 characters.



0300000

【Set Custom Prefix】

E
xample

Set the custom prefix to “CODE” (its hexadecimal value is 0x43/0x4F/0x44/0x45):

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Custom Prefix** barcode.
3. Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Enable Custom Prefix** barcode.
6. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

AIM ID Prefix

AIM (Automatic Identification Manufacturers) ID defines symbology identifier (For the details, see the **AIM ID Table** in **Appendix**). If AIM ID prefix is enabled, the scanner will add the symbology identifier before the scanned data after decoding.



0308000

** 【Disable AIM ID Prefix】



0308030

【Enable AIM ID Prefix】



AIM ID is not user programmable.

Code ID Prefix

Code ID can also be used to identify barcode type. Unlike AIM ID, Code ID is user programmable. Code ID can only consist of one or two English letters.



0307000

** 【Disable Code ID Prefix】



0307010

【Enable Code ID Prefix】



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Restore All Default Code IDs

For the information of default Code IDs, see the **Code ID Table** in **Appendix**.



0307020

【Restore All Default Code IDs】

Modify Code ID

See the examples below to learn how to modify a Code ID and restore the default Code IDs of all symbologies.

E
xample

Modify PDF417 Code ID to be “p” (its hexadecimal value is 0x70):

1. Scan the **Enter Setup** barcode.
2. Scan the **Modify PDF417 Code ID** barcode.
3. Scan the numeric barcodes “7” and “0”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Exit Setup** barcode.

Restore the default Code IDs of all symbologies:

1. Scan the **Enter Setup** barcode.
2. Scan the **Restore All Default Code IDs** barcode.
3. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】



0005000

【Modify PDF417 Code ID】



0005030

【Modify Data Matrix Code ID】



0005010

【Modify QR Code ID】



0004110

【Modify Matrix 25 Code ID】



0004230

【Modify ISSN Code ID】



0004210

【Modify AIM-128 Code ID】



0004040

【Modify EAN-8 Code ID】



0004100

【Modify ITF-6 Code ID】



0006000

****【Exit Setup】**



0006010

【Enter Setup】



0004050

【Modify EAN-13 Code ID】



0004130

【Modify Code 39 Code ID】



0004060

【Modify UPC-E Code ID】



0004150

【Modify Codabar Code ID】



0004070

【Modify UPC-A Code ID】



0004170

【Modify Code 93 Code ID】



0004080

【Modify Interleaved 2 of 5 Code ID】



0004020

【Modify Code 128 Code ID】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】



0004090

【Modify ITF-14 Code ID】



0004240

【Modify ISBN Code ID】



0004030

【Modify UCC/EAN-128 Code ID】



0004250

【Modify Industrial 25 Code ID】



0004280

【Modify Code 11 Code ID】



0004260

【Modify Standard 25 Code ID】



0004270

【Modify Plessey Code ID】



0004290

【Modify MSI-Plessey Code ID】



0004310

【Modify GS1 Databar Code ID】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Custom Suffix

Enable/Disable Custom Suffix

If custom suffix is enabled, you are allowed to append to the data a user-defined suffix that cannot exceed 11 characters. For example, if the custom suffix is “AB” and the barcode data is “123”, the Host will receive “123AB”.



0306000

** 【Disable Custom Suffix】



0306010

【Enable Custom Suffix】

Set Custom Suffix

To set a custom suffix, scan the **Set Custom Suffix** barcode, the numeric barcodes corresponding to the hexadecimal value of a desired suffix, and the **Save** barcode.

Note: A custom suffix cannot exceed 11 characters.



0301000

【Set Custom Suffix】

E
sample

Set the custom suffix to “CODE” (its hexadecimal value is 0x43/0x4F/0x44/0x45):

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Custom Suffix** barcode.
3. Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Enable Custom Suffix** barcode.
6. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



0006010

【Enter Setup】

Terminating Character Suffix

Enable/Disable Terminating Character Suffix

A terminating character such as carriage return (CR) or carriage return/line feed pair (CRLF) can only be used to mark the end of data, which means nothing can be added after it.



0309000

【Disable Terminating Character Suffix】

0309010

**** 【Enable Terminating Character Suffix】**

Set Terminating Character Suffix

The scanner provides a shortcut for setting the terminating character suffix to 0x0D (CR) or 0x0D,0x0A (CRLF) by scanning the following barcode.



0310010

**** 【Terminating Character 0x0D】**

0310020

【Terminating Character 0x0D,0x0A】

0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

To set a terminating character suffix, scan the **Set Terminating Character Suffix** barcode and the numeric barcodes representing the hexadecimal value of a desired terminating character and then scan the **Save** barcode. Refer to the **ASCII Table** in **Appendix** for hexadecimal values of terminating characters.

Note: A terminating character suffix cannot exceed 7 characters.



0310000

【Set Terminating Character Suffix】

E
xample

Set the terminating character suffix to 0x0A:

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Terminating Character Suffix** barcode.
3. Scan the numeric barcodes “0” and “A”. (See the **Digit Barcodes** in **Appendix**)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** in **Appendix**)
5. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】



【Enter Setup】

Chapter 7 Image Control

Image Flipping

You may flip the image captured by the scanner to meet actual need by scanning the appropriate barcode on the next page. The following figures illustrate original image and three flipped images.



Original Image



Image Flipped Horizontally



Image Flipped Vertically



Image Flipped Horizontally and Vertically



**【Exit Setup】



0006010

【Enter Setup】

Flip



0202000

**** 【Do Not Flip】**



0202030

【Flip Vertically】



0202031

【Flip Horizontally】



0202032

【Flip Horizontally and Vertically】

Flip Vertically



0202033

【Flip Vertically】



0202034

【Do Not Flip Vertically】

Flip Horizontally



0202035

【Flip Horizontally】



0202036

【Do Not Flip Horizontally】



0006000

**** 【Exit Setup】**



0006010

【Enter Setup】

Chapter 8 Scanning Preferences

Introduction

This chapter contains information as to how to adapt your scanner to various applications with preference setting. For instance, to narrow the field of view of the scanner to make sure it reads only those barcodes intended by the user.

Decode Area

Whole Area Decoding

When this option is enabled, the scanner attempts to decode barcode(s) within its field of view, from the center to the periphery, and transmits the barcode that has been first decoded.



0322000

**** 【Whole Area Decoding】**

Central Area Decoding

The scanner attempts to decode barcode(s) within a specified central area and transmits the barcode that has been first decoded. This option allows the scanner to narrow its field of view to make sure it reads only those barcodes intended by the user. For instance, if multiple barcodes are placed closely together, central area decoding in conjunction with appropriate pre-defined central area will insure that only the desired barcode is read.



0322010

【Central Area Decoding】



0006000

**** 【Exit Setup】**




0006010

【Enter Setup】

Specify Central Area

The default central area is a (Width*20%) by (Height*20%) area in the center of the scanner's field of view, as shown in the figure below. You can define the central area by scanning the **Specify Central Area** barcode and numeric barcode(s) that represent(s) a desired percentage (1-100). If Central Area Decoding is enabled by scanning the **Central Area Decoding** barcode, the scanner only reads barcodes that intersect the predefined central area.

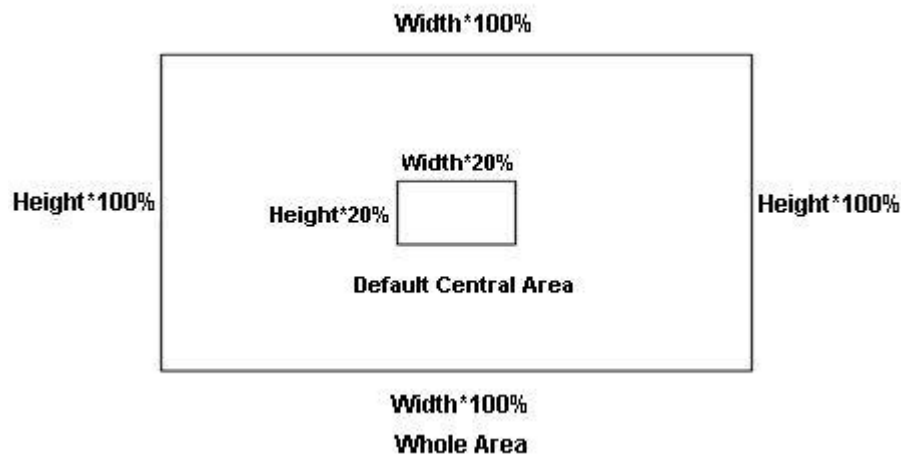

0322020

【Specify Central Area】

E
xample

Set the percentage of central area to 20%:

1. Scan the **Enter Setup** barcode.
2. Scan the **Specify Central Area** barcode.
3. Scan the numeric barcodes "2" and "0".
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode.



0006000

** 【Exit Setup】

Appendix

Digit Barcodes

After scanning numeric barcode(s), you need to scan the **Save** barcode to save the data.

0~5



【0】



【1】



【2】



【3】



【4】



【5】

6~9



0000060

【6】



0000070

【7】



0000080

【8】



0000090

【9】

A~F



0000100

【A】



0000110

【B】



0000120

【C】



0000130

【D】



0000140

【E】



0000150

【F】

Save/Cancel Barcodes

After reading numeric barcode(s), you need to scan the **Save** barcode to save the data. If you scan the wrong digit(s), you can either scan the **Cancel** barcode and then start the configuration all over again, or scan the **Delete the Last Digit** barcode and then the correct digit, or scan the **Delete All Digits** barcode and then the digits you want.

For instance, after reading the **Maximum Length** barcode and numeric barcodes “1”, “2” and “3”, you scan:

- ✧ **Delete the Last Digit:** The last digit “3” will be removed.
- ✧ **Delete All Digits:** All digits “123” will be removed.
- ✧ **Cancel:** The maximum length configuration will be cancelled. And the scanner is still in the setup mode.



【 Save 】



【 Cancel 】



【 Delete the Last Digit 】



【 Delete All Digits 】

Factory Defaults Table

Parameter		Factory Default	Remark
Programming Barcode			
Barcode Programming		Disabled	
Programming Barcode Data		Do not send	
Communication Settings			
USB HID-KBW		Enabled	
RS-232	Baud Rate	9600	
	Parity Check	None	
	Number of Data Bits	8	
	Number of Stop Bits	1	
	Hardware Flow Control	No flow control	
HID-KBW	Polling Rate	1ms	
	USB Country Keyboard Type	U.S.	
	Convert Case	No conversion	
	Inter-Keystroke Delay	10ms	
	Beep on Unknown Character	Do not beep	
	Emulate ALT + Keypad	Disabled	
	Function Key Mapping	Disabled	
	Emulate Numeric Keypad	Disabled	
	Code Page	Windows 1252 (Latin I)	
Scan Mode			
Scan Mode		Manual mode	
Manual Mode	Decode Session Timeout	3,000ms	Applicable to all three scan modes. 0~3,600,000ms
	Auto Sleep	Enabled	
	Time Period from Idle to Sleep	500ms	0~65,535ms
	Timeout between Decodes (Same Barcode)	Disabled 1,500ms	 0~65,535ms

Parameter		Factory Default	Remark
Sense Mode	Decode Session Timeout	3,000ms	Applicable to all three scan modes. 0~3,600,000ms
	Image Stabilization Timeout	500ms	0~1,600ms
	Operation after Good Decode	Pause after good decode	
	Timeout between Decodes (Same Barcode)	Enabled	
		1,500ms	0~65,535ms
	Threshold Value of Illumination Change	2	1~20
Continuous Mode	Decode Session Timeout	3,000ms	Applicable to all three scan modes. 0~3,600,000ms
	Timeout between Decodes	1,000ms	0~65,535ms
	Timeout between Decodes (Same Barcode)	Enabled	
		1,500ms	0~65,535ms
Illumination & Aiming			
Illumination		Normal	
Aiming		Normal	
Notifications			
Startup Beep		Enabled	
Good Read Beep (Non-Programming Barcode)	Notification	Enabled	
	Beep Type	Type 3	
	Beep Volume	Loud	
Good Read Beep (Programming Barcode)		Enabled	
Good Read LED Notification		Enabled	
NGR (Not Good Read) Message		Do not transmit	
		Null	

Parameter	Factory Default	Remark
Prefix & Suffix		
Prefix Sequence	Custom+Code ID+AIM ID	
Custom Prefix	Disabled	
	Null	
AIM ID Prefix	Disabled	
Code ID Prefix	Disabled	
Custom Suffix	Disabled	
	Null	
Terminating Character Suffix	Enabled	
	0x0D	Carriage Return
Image Control		
Image Flipping	Do not flip	
Scanning Preferences		
Decode Area	Whole Area Decoding	
Central Area	20%	

Parameter	Factory Default	Remark
Symbologies		
Video Reverse	Disabled	Applicable to all symbologies.
Code 128		
Code 128	Enabled	
Maximum Length	127	
Minimum Length	1	
UCC/EAN-128		
UCC/EAN-128	Enabled	
Maximum Length	127	
Minimum Length	1	
AIM-128		
AIM-128	Enabled	
Maximum Length	127	
Minimum Length	1	
EAN-8		
EAN-8	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Extend to EAN-13	Disabled	
EAN-13		
EAN-13	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
ISSN		
ISSN	Disabled	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	

Parameter	Factory Default	Remark
ISBN		
ISBN	Disabled	
ISBN Format	ISBN-13	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
UPC-E		
UPC-E	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Extend to UPC-A	Disabled	
System Character "0"	Transmit	
UPC-A		
UPC-A	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Preamble Character "0"	Do not transmit	
Interleaved 2 of 5		
Interleaved 2 of 5	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Maximum Length	100	
Minimum Length	6	
ITF-6		
ITF-6	Disabled	
Check Digit	Do not transmit	

Parameter	Factory Default	Remark
ITF-14		
ITF-14	Disabled	
Check Digit	Do not transmit	
Matrix 2 of 5		
Matrix 2 of 5	Disabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	6	
Industrial 2 of 5		
Industrial 2 of 5	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	6	
Standard 2 of 5		
Standard 2 of 5	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	6	
Code 39		
Code 39	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Start/Stop Character	Do not transmit	
Code 39 Full ASCII	Enabled	
Maximum Length	127	
Minimum Length	4	

Parameter	Factory Default	Remark
Codabar		
Codabar	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Start/Stop Character	Do not transmit	
Start/Stop Character Format	ABCD/ABCD	
Maximum Length	127	
Minimum Length	2	
Code 93		
Code 93	Enabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	3	
GS1 Databar		
GS1 Databar	Enabled	
Application Identifier "01"	Transmit	
Code 11		
Code 11	Enabled	
Check Digit Verification	One check digit, MOD11	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	2	
Plessey		
Plessey	Disabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	1	

Parameter	Factory Default	Remark
MSI-Plessey		
MSI-Plessey	Disabled	
Check Digit Verification	One check digit, MOD10	
Check Digit	Do not transmit	
Maximum Length	127	
Minimum Length	2	
PDF 417		
PDF 417	Enabled	
Maximum Length	2710	
Minimum Length	1	
PDF 417 Twin Code	Read single PDF417 only	
Transmission Order of Twin Code	Order 1	
Character Encoding	Default Character Encoding	
QR Code		
QR Code	Enabled	
Micro QR	Enabled	
Maximum Length	7089	
Minimum Length	1	
QR Twin Code	Read single QR only	
Transmission Order of Twin Code	Order 3	
Character Encoding	Default Character Encoding	
Data Matrix		
Data Matrix	Enabled	
Rectangular Barcode	Enabled	
Mirror Image	Decode	
Maximum Length	3116	
Minimum Length	1	

AIM ID Table

Symbology	AIM ID	Remark
EAN-13]E0	Standard EAN-13
]E3	EAN-13 + 2/5-Digit Add-On Code
EAN-8]E4	Standard EAN-8
]E4...]E1...	EAN-8 + 2-Digit Add-On Code
]E4...]E2...	EAN-8 + 5-Digit Add-On Code
UPC-E]E0	Standard UPC-E
]E3	UPC-E + 2/5-Digit Add-On Code
UPC-A]E0	Standard UPC-A
]E3	UPC-A + 2/5-Digit Add-On Code
Code 128]C0	Standard Code 128
UCC/EAN-128]C1	FNC1 is the character right after the start character
AIM-128]C2	FNC1 is the 2nd character after the start character
ISBT-128]C4	
Interleaved 2 of 5]I0	No check digit verification
]I1	Transmit check digit after verification
]I3	Do not transmit check digit after verification
ITF-6]I1	Transmit check digit
]I3	Do not transmit check digit
ITF-14]I1	Transmit check digit
]I3	Do not transmit check digit
Industrial 2 of 5]S0	Not specified
Standard 2 of 5]R0	No check digit verification
]R8	MOD10; do not transmit check digit
]R9	MOD10; transmit check digit
Code 39]A0	Transmit barcodes as is; Full ASCII disabled; no check digit verification
]A1	MOD43; transmit check digit
]A3	MOD43; do not transmit check digit
]A4	Full ASCII enabled; no check digit verification
]A5	Full ASCII enabled; transmit check digit
]A7	Full ASCII enabled; do not transmit check digit

Symbology	AIM ID	Remark
Codabar	JF0	Standard Codabar
	JF2	Transmit check digit after verification
	JF4	Do not transmit check digit after verification
Code 93	JG0	Standard Code 93
Code 11	JH0	MOD11; transmit check digit
	JH1	MOD11/MOD11; transmit check digit
	JH3	Do not transmit check digit after verification
	JH9	No check digit verification
GS1-DataBar (RSS)	Je0	Standard GS1-DataBar
Plessey	JP0	Standard Plessey
MSI-Plessey	JM0	MOD10; transmit check digit
	JM1	MOD10; do not transmit check digit
	JM7	MOD10/MOD11; do not transmit check digit
	JM8	MOD10/MOD11; transmit check digit
	JM9	No check digit verification
Matrix 2 of 5	JX0	Specified by the manufacturer
	JX1	No check digit verification
	JX2	One check digit, MOD10; transmit check digit
	JX3	One check digit, MOD11; do not transmit check digit
ISBN	JX4	Standard ISBN
ISSN	JX5	Standard ISSN
PDF417	JL0	Comply with 1994 PDF417 specifications
Data Matrix	Jd0	ECC000 - ECC140
	Jd1	ECC200
	Jd2	ECC200, FNC1 is the 1st or 5th character after the start character
	Jd3	ECC200, FNC1 is the 2nd or 6th character after the start character
	Jd4	ECC200, ECI included
	Jd5	ECC200, FNC1 is the 1st or 5th character after the start character, ECI included
	Jd6	ECC200, FNC1 is the 2nd or 6th character after the start character, ECI included

Symbology	AIM ID	Remark
QR Code]Q0	QR1
]Q1	2005 version, ECI excluded
]Q2	2005 version, ECI included
]Q3	QR Code 2005, ECI excluded, FNC1 is the 1st character after the start character
]Q4	QR Code 2005, ECI included, FNC1 is the 1st character after the start character
]Q5	QR Code 2005, ECI excluded, FNC1 is the 2nd character after the start character
]Q6	QR Code 2005, ECI included, FNC1 is the 2nd character after the start character

Reference: ISO/IEC 15424:2008 Information technology – Automatic identification and data capture techniques – Data Carrier Identifiers (including Symbology Identifiers).

Code ID Table

Symbology	Code ID
Code 128	j
UCC/EAN-128	j
AIM-128	f
EAN-8	d
EAN-13	d
ISSN	n
ISBN	B
UPC-E	c
UPC-A	c
Interleaved 2 of 5	e
ITF-6	e
ITF-14	e
Matrix 2 of 5	v
Industrial 2 of 5	D
Standard 2 of 5	s
Code 39	b
Codabar	a
Code 93	i
Code 11	H
Plessey	p
MSI-Plessey	m
GS1 Databar	R
PDF417	r
QR Code	Q
Data Matrix	u

ASCII Table

Hex	Dec	Char
00	0	NUL (Null char.)
01	1	SOH (Start of Header)
02	2	STX (Start of Text)
03	3	ETX (End of Text)
04	4	EOT (End of Transmission)
05	5	ENQ (Enquiry)
06	6	ACK (Acknowledgment)
07	7	BEL (Bell)
08	8	BS (Backspace)
09	9	HT (Horizontal Tab)
0a	10	LF (Line Feed)
0b	11	VT (Vertical Tab)
0c	12	FF (Form Feed)
0d	13	CR (Carriage Return)
0e	14	SO (Shift Out)
0f	15	SI (Shift In)
10	16	DLE (Data Link Escape)
11	17	DC1 (XON) (Device Control 1)
12	18	DC2 (Device Control 2)
13	19	DC3 (XOFF) (Device Control 3)
14	20	DC4 (Device Control 4)
15	21	NAK (Negative Acknowledgement)
16	22	SYN (Synchronous Idle)
17	23	ETB (End of Trans. Block)
18	24	CAN (Cancel)
19	25	EM (End of Medium)
1a	26	SUB (Substitute)
1b	27	ESC (Escape)
1c	28	FS (File Separator)
1d	29	GS (Group Separator)

Hex	Dec	Char
1e	30	RS (Request to Send)
1f	31	US (Unit Separator)
20	32	SP (Space)
21	33	! (Exclamation Mark)
22	34	" (Double Quote)
23	35	# (Number Sign)
24	36	\$ (Dollar Sign)
25	37	% (Percent)
26	38	& (Ampersand)
27	39	` (Single Quote)
28	40	((Right / Closing Parenthesis)
29	41) (Right / Closing Parenthesis)
2a	42	* (Asterisk)
2b	43	+ (Plus)
2c	44	, (Comma)
2d	45	- (Minus / Dash)
2e	46	. (Dot)
2f	47	/ (Forward Slash)
30	48	0
31	49	1
32	50	2
33	51	3
34	52	4
35	53	5
36	54	6
37	55	7
38	56	8
39	57	9
3a	58	: (Colon)
3b	59	; (Semi-colon)
3c	60	< (Less Than)
3d	61	= (Equal Sign)

Hex	Dec	Char
3e	62	> (Greater Than)
3f	63	? (Question Mark)
40	64	@ (AT Symbol)
41	65	A
42	66	B
43	67	C
44	68	D
45	69	E
46	70	F
47	71	G
48	72	H
49	73	I
4a	74	J
4b	75	K
4c	76	L
4d	77	M
4e	78	N
4f	79	O
50	80	P
51	81	Q
52	82	R
53	83	S
54	84	T
55	85	U
56	86	V
57	87	W
58	88	X
59	89	Y
5a	90	Z
5b	91	[(Left / Opening Bracket)
5c	92	\ (Back Slash)
5d	93] (Right / Closing Bracket)

Hex	Dec	Char
5e	94	^ (Caret / Circumflex)
5f	95	_ (Underscore)
60	96	' (Grave Accent)
61	97	a
62	98	b
63	99	c
64	100	d
65	101	e
66	102	f
67	103	g
68	104	h
69	105	i
6a	106	j
6b	107	k
6c	108	l
6d	109	m
6e	110	n
6f	111	o
70	112	p
71	113	q
72	114	r
73	115	s
74	116	t
75	117	u
76	118	v
77	119	w
78	120	x
79	121	y
7a	122	z
7b	123	{ (Left/ Opening Brace)
7c	124	(Vertical Bar)
7d	125	} (Right/Closing Brace)
7e	126	~ (Tilde)
7f	127	DEL (Delete)

ASCII Function Key Mapping Table

ASCII Function	ASCII Value (HEX)	No Function Key Mapping	Function Key Mapping
NUL (Null char.)	00	Null	Ctrl+2
SOH (Start of Header)	01	Keypad Enter	Ctrl+A
STX (Start of Text)	02	Caps Lock	Ctrl+B
ETX (End of Text)	03	Null	Ctrl+C
EOT (End of Transmission)	04	Null	Ctrl+D
ENQ (Enquiry)	05	Null	Ctrl+E
ACK (Acknowledgment)	06	Null	Ctrl+F
BEL (Bell)	07	Enter	Ctrl+G
BS (Backspace)	08	Left Arrow	Ctrl+H
HT (Horizontal Tab)	09	Horizontal Tab	Ctrl+I
LF (Line Feed)	0A	Down Arrow	Ctrl+J
VT (Vertical Tab)	0B	Vertical Tab	Ctrl+K
FF (Form Feed)	0C	Backspace	Ctrl+L
CR (Carriage Return)	0D	Enter	Ctrl+M
SO (Shift Out)	0E	Insert	Ctrl+N
SI (Shift In)	0F	Esc	Ctrl+O
DLE (Data Link Escape)	10	F11	Ctrl+P
DC1 (XON) (Device Control 1)	11	Home	Ctrl+Q
DC2 (Device Control 2)	12	Print Screen	Ctrl+R
DC3 (XOFF) (Device Control 3)	13	Delete	Ctrl+S
DC4 (Device Control 4)	14	tab+shift	Ctrl+T
NAK (Negative Acknowledgment)	15	F12	Ctrl+U
SYN (Synchronous Idle)	16	F1	Ctrl+V
ETB (End of Trans. Block)	17	F2	Ctrl+W
CAN (Cancel)	18	F3	Ctrl+X
EM (End of Medium)	19	F4	Ctrl+Y
SUB (Substitute)	1A	F5	Ctrl+Z
ESC (Escape)	1B	F6	See the following table
FS (File Separator)	1C	F7	
GS (Group Separator)	1D	F8	
RS (Request to Send)	1E	F9	
US (Unit Separator)	1F	F10	

ASCII Function Key Mapping Table (Continued)

The function key mappings of the last five characters in the previous table differ from one keyboard layout to another.

Country/ Keyboard Layout	Function Key Mapping				
	1B	1C	1D	1E	1F
United States	Ctrl+[Ctrl+\	Ctrl+]	Ctrl+6	Ctrl+-
Belgium	Ctrl+[Ctrl+<	Ctrl+]	Ctrl+6	Ctrl+-
Scandinavia	Ctrl+8	Ctrl+<	Ctrl+9	Ctrl+6	Ctrl+-
France	Ctrl+^	Ctrl+8	Ctrl+\$	Ctrl+6	Ctrl+=
Germany		Ctrl+Ã	Ctrl++	Ctrl+6	Ctrl+-
Italy		Ctrl+\	Ctrl++	Ctrl+6	Ctrl+-
Switzerland		Ctrl+<	Ctrl+.	Ctrl+6	Ctrl+-
United Kingdom	Ctrl+[Ctrl+ ¢	Ctrl+]	Ctrl+6	Ctrl+-
Denmark	Ctrl+8	Ctrl+\	Ctrl+9	Ctrl+6	Ctrl+-
Norway	Ctrl+8	Ctrl+\	Ctrl+9	Ctrl+6	Ctrl+-
Spain	Ctrl+[Ctrl+\	Ctrl+]	Ctrl+6	Ctrl+-

Code Pages List

Numeric Barcode Needed	Code Page
0	Windows 1252 (Latin I)
1	Windows 1251 (Cyrillic)



Headquarters

Fujian Newland Auto-ID Tech. Co., Ltd.

3F, Building A, No.1, Rujiang West Rd., Mawei, Fuzhou,
Fujian, China 350015

TEL: +86 - (0) 591-83979222

FAX: +86 - (0) 591-83979208

E-mail: marketing@nlscan.com

WEB: www.nlscan.com

Newland Europe BV

Rolweg 25, 4104 AV Culemborg, The Netherlands

TEL: +31 (0) 345 87 00 33

FAX: +31 (0) 345 87 00 39

Email: info@newland-id.com

WEB: www.newland-id.com

Tech Support: tech-support@newland-id.com

Newland North America Inc.

Address: 46559 Fremont Blvd., Fremont, CA 94538, USA

TEL: 510 490 3888

Fax: 510 490 3887

Email: info@newlandna.com

WEB: www.newlandna.com

Newland Taiwan Inc.

7F-6, No. 268, Liancheng Rd., Jhonghe Dist. 235, New
Taipei City, Taiwan

TEL: +886 2 7731 5388

FAX: +886 2 7731 5389

Email: info@newland-id.com.tw

WEB: www.newland-id.com.tw